


Air conditioner

Installation manual

AC***MXADKH / AC***MXASEH

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

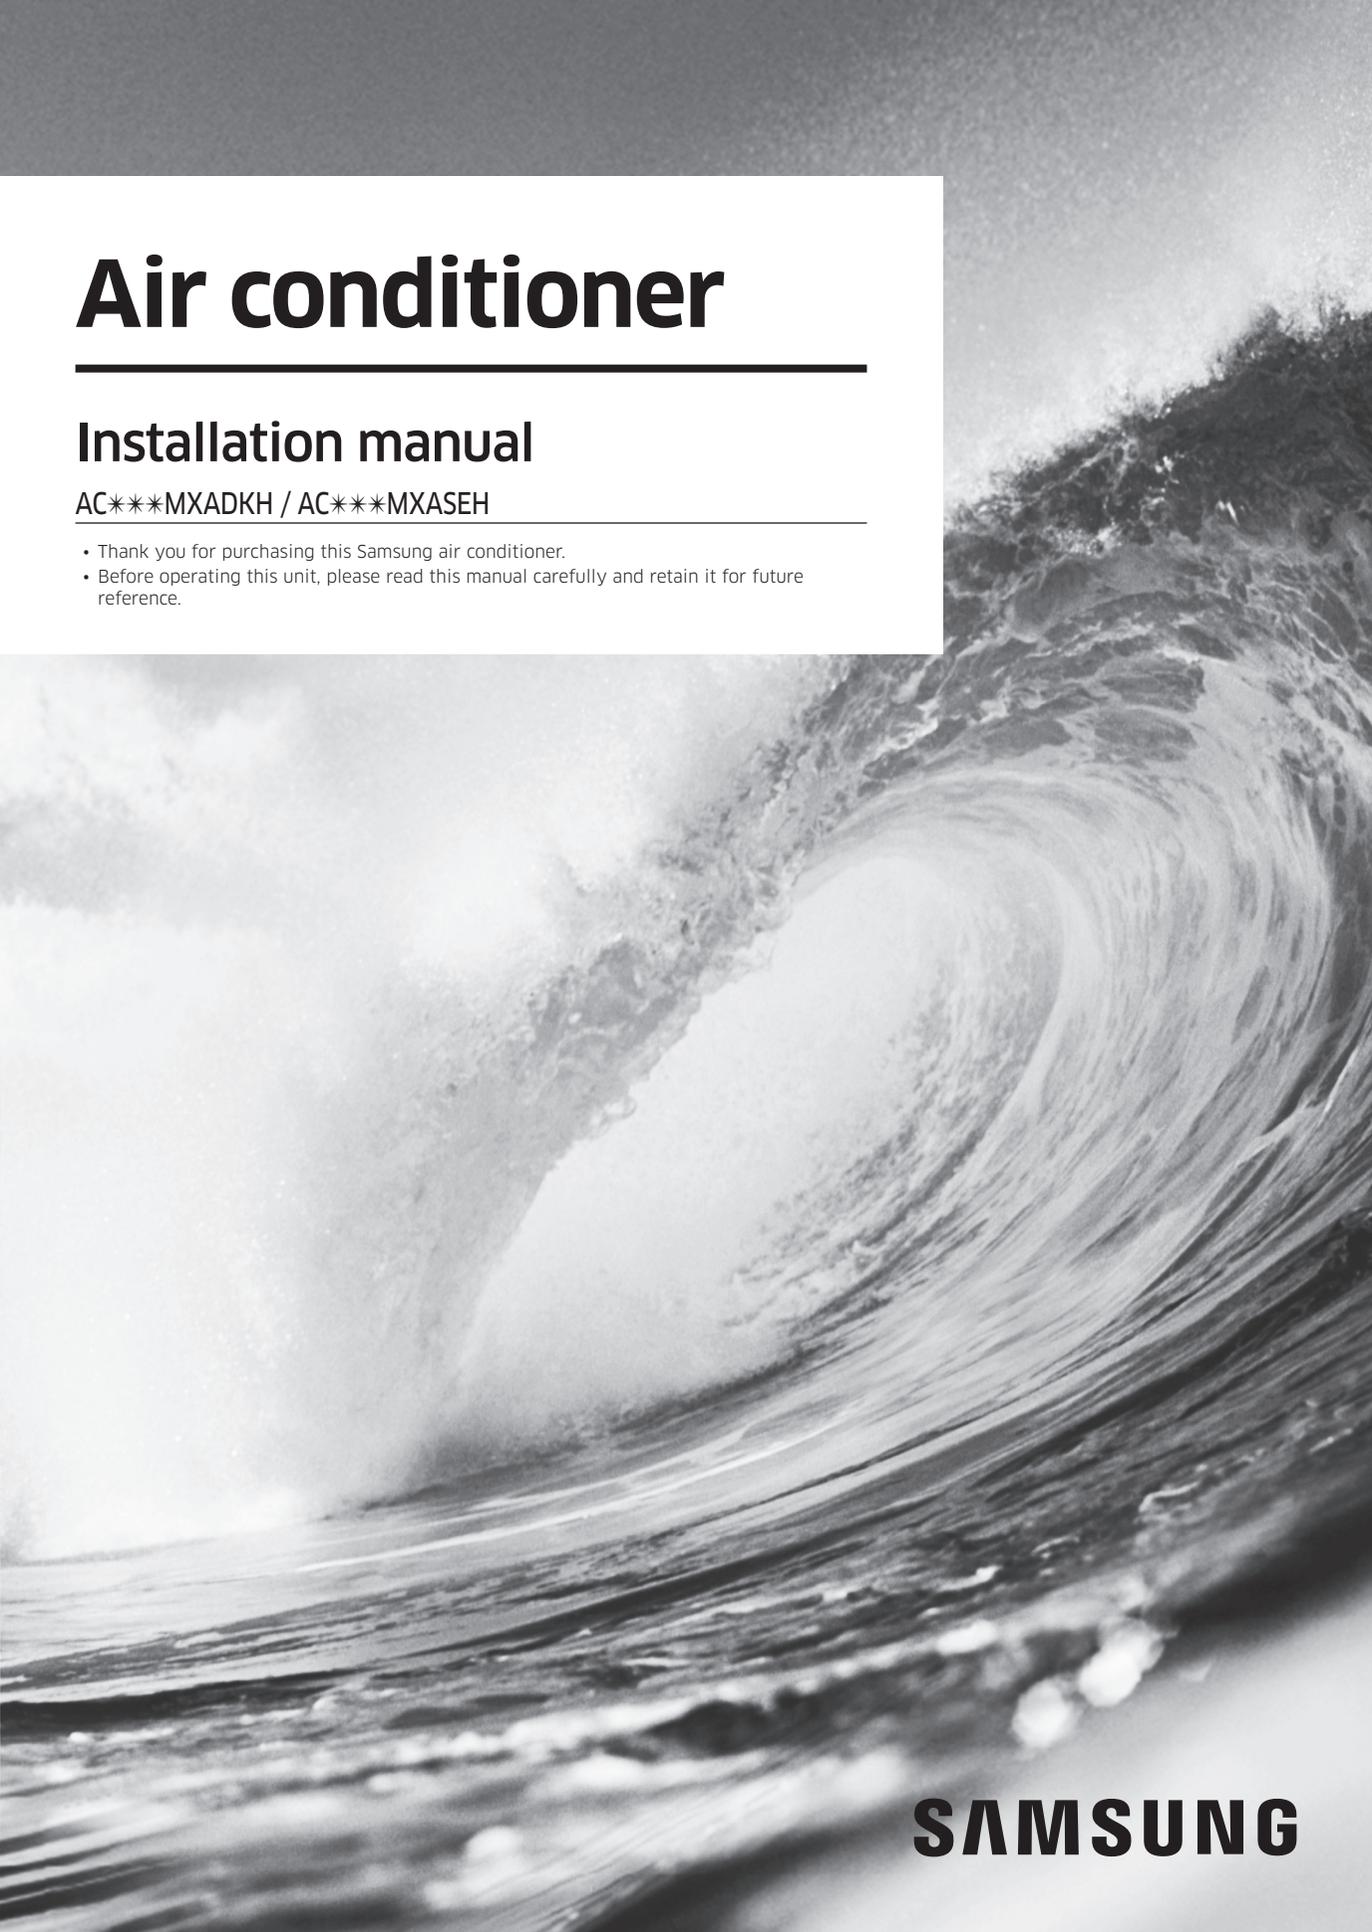

SAMSUNG

Contents

Safety Information	3
General information	3
Installing the unit	4
Power supply line, fuse or circuit breaker	4
Installation Procedure	5
Step 1 Choosing the installation location	5
Step 2 Fixing the outdoor unit in place	7
Step 3 Connecting the power cables, communication cable, and controllers	8
Step 4 Optional: Extending the power cable	13
Step 5 Connecting the refrigerant pipe	15
Step 6 Optional: Cutting and flaring the pipes	16
Step 7 Connecting up and removing air in the circuit	17
Step 8 Adding refrigerant (R-410A)	18
Step 9 Optional: Installing DPM	20
Step 10 Performing the gas leak test	21
Step 11 Connecting the drain hose to the outdoor unit	21
Step 12 Insulating the refrigerant pipes	22
Step 13 Checking the earthing	23
Step 14 Performing final check and trial operation	23
Extra procedures	27
Pumping down refrigerant	27
Relocating the indoor and outdoor units	27
Using the stop valve	27
Appendix	29
COMMISSION DELEGATED REGULATION (EU) No 626/2011 ¹⁾	29
Troubleshooting	53
Technical specifications	55

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html

Safety Information

WARNING

- Hazards or unsafe practices that may result in severe personal injury or death.

CAUTION

- Hazards or unsafe practices that may result in minor personal injury or property damage.

Carefully follow the precautions listed below because they are essential to guarantee the safety of the equipment.

WARNING

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

General information

WARNING

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.

- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- All the materials used for the manufacture and packaging of the air conditioner are recyclable.
- The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with current laws.
- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorized centres or returned to the retailer so that it can be disposed of correctly and safely.

Safety Information

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For this reason, when provisions of the installation manual are not complied with, the cost required to access and repair the units (in SAFETY CONDITIONS, as set out in prevailing regulations) with harnesses, ladders, scaffolding or any other elevation system will NOT be considered part of the warranty and will be charged to the end customer.

Power supply line, fuse or circuit breaker

WARNING

- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.
- Always verify that a suitable earthing connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air conditioners.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Be sure not to perform power cable modification, extension wiring, and multiple wire connection.
 - It may cause electric shock or fire due to poor connection, poor insulation, or current limit override.
 - When extension wiring is required due to power line damage, refer to "Step 4 Optional: Extending the power cable" in the installation manual.

Installing the unit

WARNING

IMPORTANT: When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines.


- Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.
- Our units should be installed in compliance with the spaces shown in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. The unit's components should be accessible and easy to disassemble without endangering people and objects.

Installation Procedure

Step 1 Choosing the installation location

Installation location requirements


- Do not place the outdoor unit on its side or upside down. Failing to do so may cause the compressor lubrication oil to run into the cooling circuit and lead to a serious damage to the unit.
- Install the unit in a well-ventilated location away from direct sunlight or strong winds.
- Install the unit in a location that would not obstruct any passageways or thoroughfares.
- Install the unit in a location that would not inconvenience or disturb your neighbors, as they could be affected by the noise or the airflow coming from the unit.
- Install the unit in a location where the pipes and the cables can be easily connected to the indoor unit.
- Install the unit on a flat, stable surface that can withstand the weight of the unit. Otherwise, the unit can generate noise and vibration during operation.
- Install the unit so that the air flow is directed towards the open area.
- Maintain sufficient clearance around the outdoor unit, especially from a radio, computer, stereo system, etc.

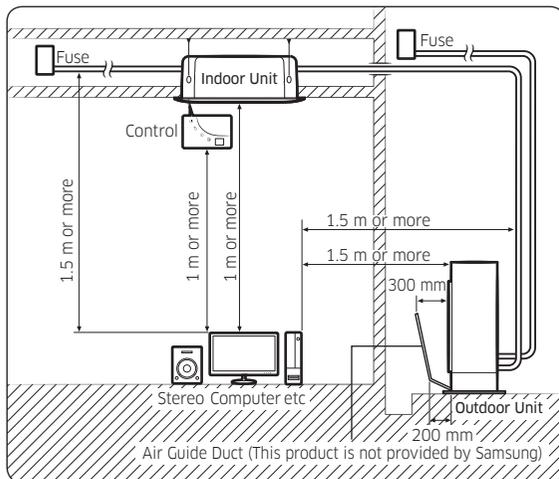


- Install the unit at a height where its base can be firmly fixed in place.
- Make sure that the water dripping from the drain hose runs away correctly and safely.

⚠ CAUTION

- You have just purchased a system air conditioner and it has been installed by your installation specialist.
- This device must be installed according to the national electrical rules.
- If your outdoor unit exceeds a net weight of 60 kg, do not install it on a suspended wall, but stand it on a floor.
- When installing the outdoor unit at the seaside, make sure that it is not directly exposed to sea breeze. If you cannot find an adequate place free from direct sea breeze, construct a protection wall or a protective fence.
 - Install the outdoor unit in a place (such as near buildings etc.) where it can be prevented from sea breeze. Failure to do so may cause a damage to the outdoor unit.

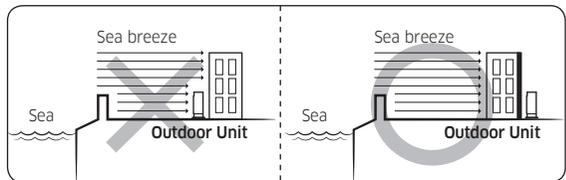

- If you cannot avoid installing the outdoor unit at the seaside, construct a protection wall around to block the sea breeze.
- Construct a protection wall with a solid material such as concrete to block the sea breeze. Make sure that the height and the width of the wall are 1.5 times larger than the size of the outdoor unit. Also, secure a space larger than 700 mm between the protection wall and the outdoor unit for exhausted air to ventilate.

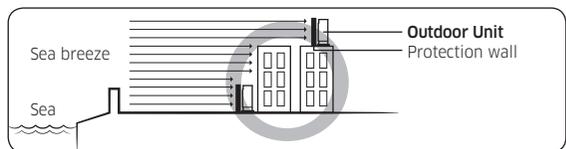

⚠ CAUTION

- Depending on the condition of power supply, unstable power or voltage may cause malfunction of the parts or control system. (At the ship or places using power supply from electric generator...etc)

Installation Procedure


- Install the unit in a place where water can drain smoothly.
- If you have any difficulty finding installation location as prescribed above, contact your manufacturer for details.
- Be sure to clean the sea water and the dust on the heat exchanger of the outdoor unit and apply a corrosion inhibitor on it. (At least once in a year.)

Outdoor unit dimensions


A Type AC026MXADKH/AC035MXADKH/AC052MXASEH
B Type AC052MXADKH/AC060MXADKH
C Type AC071MXADKH/AC071MXASEH
D Type AC100MXASEH


Minimum clearances for the outdoor unit

When installing 1 outdoor unit

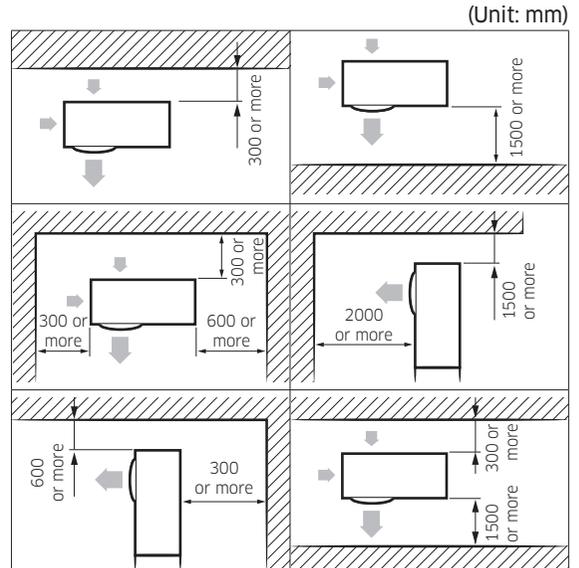


When installing more than 1 outdoor unit

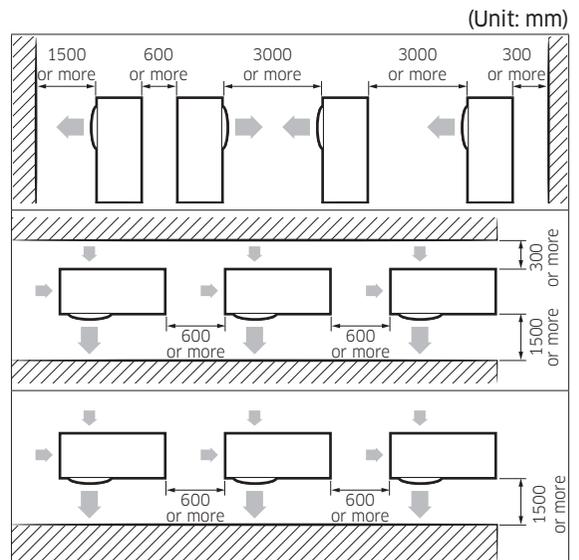

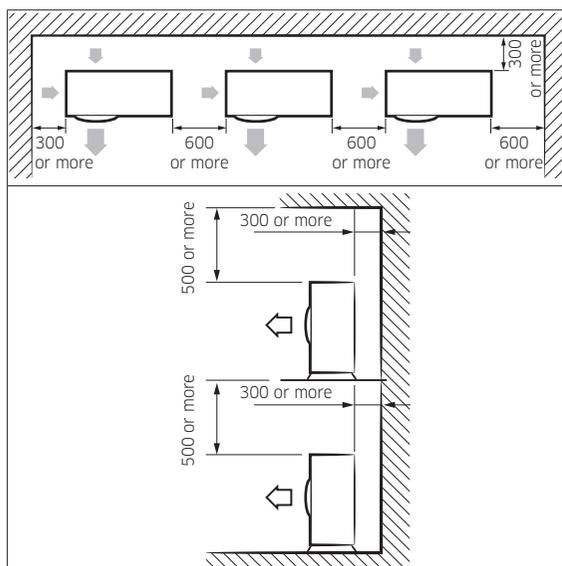

Moving the outdoor unit with wire rope

- 1 Before carrying the outdoor unit, fasten two wire ropes of 8 m or longer, as shown in the figure.
- 2 To prevent damages or scratches effectively, insert a piece of cloth between the outdoor unit and the ropes.
- 3 Move the outdoor unit.

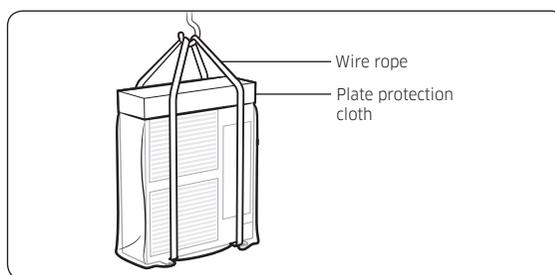


⚠ CAUTION

- The outdoor unit must be installed according to the specified distances in order to permit accessibility from each side, to guarantee correct operation, maintenance, and repair of the unit. The components of the outdoor unit must be reachable and removable under safe conditions for people and the unit.

⚠ WARNING

- Should adopt bar type louver. Don't use a type of rain resistance louver.

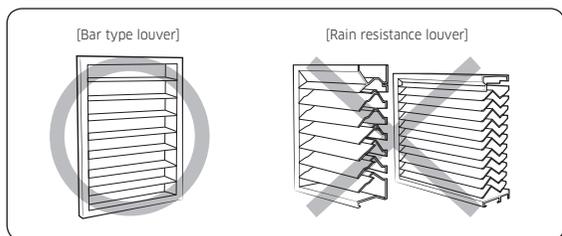


- Louver specifications.
 - Angle criteria : less than 20°
 - Opening ratio criteria : greater than 80%



Step 2 Fixing the outdoor unit in place

Install the outdoor unit on a rigid and stable base to prevent disturbance from any noise caused by vibration. When installing the unit at a height or in a location exposed to strong winds, fix the unit securely to a support (i.e., a wall or a ground).

Fix the outdoor unit with anchor bolts. Make sure that the anchor bolts are 20 mm or higher from the base surface.

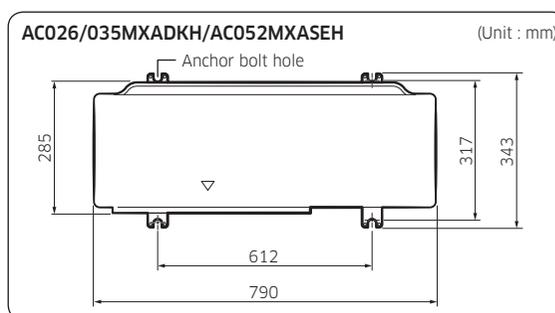


Installation Procedure

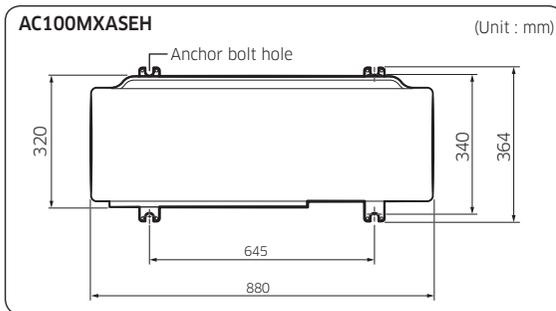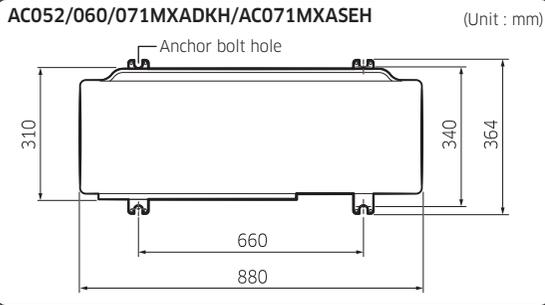


⚠ CAUTION

- Install a drain outlet at the lowest end around the base for outdoor unit drainage
- When installing the outdoor unit on the roof, waterproof the unit and check the ceiling strength.

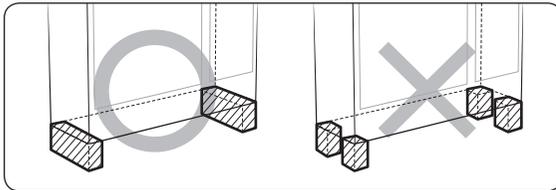

- Make sure that the wall can support the weights of the rack and the outdoor unit.
- Install the rack close to the column as much as possible.

Optional: Fixing the outdoor unit to a wall with a rack

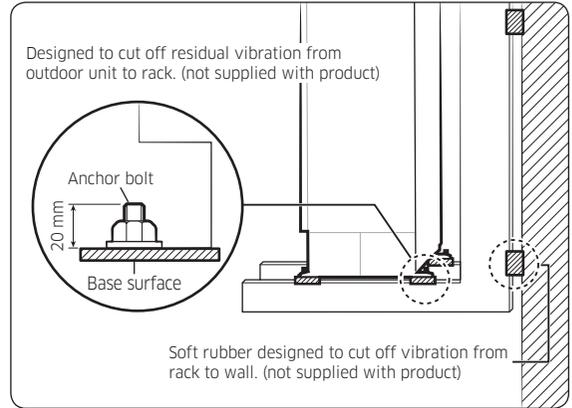

- Install a proper grommet in order to reduce noise and residual vibration transferred by the outdoor unit towards the wall.

⚠ CAUTION

- When installing an air guide duct, be sure to check the following:
 - The screws do not damage the copper pipe.
 - The air guide duct is fixed firmly on the guard fan.

Step 3 Connecting the power cables, communication cable, and controllers

You must connect the following three electrical cables to the outdoor unit:

- The main power cable between the auxiliary circuit breaker and the outdoor unit.
- The outdoor-to-indoor power cable between the outdoor unit and the indoor unit.
- The communication cable between the outdoor unit and the indoor unit.

⚠ CAUTION

- During installation, make first the refrigerant connections and then the electrical connections. If the unit is uninstalled, first disconnect the electrical cables and then the refrigerant connections.
- Connect the air conditioner to the earthing system before making the electrical connections.

NOTE


- Especially, if your outdoor unit is the one designed for Russian and European markets, consult the supply authority, if necessary, to estimate and reduce the supply system impedance before installation.

CAUTION

- If the outdoor unit is installed in a location vulnerable to an electric leak or submergence, make sure to install an ELCB.


Air conditioning system examples

When using earth leakage circuit breaker (ELCB) for a single phase

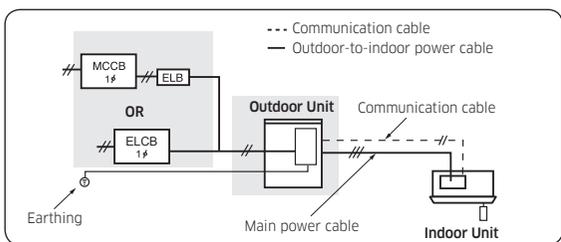

Connecting the main power cable

When using ELB for 1 phase

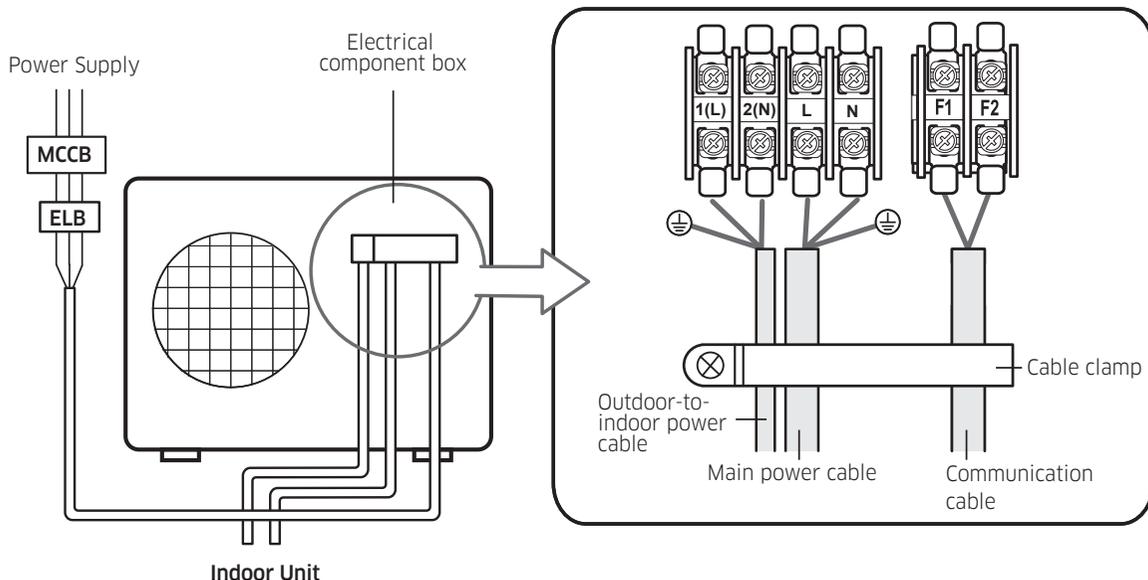

The appearance of the unit may be different from the picture depending on the model.

Installation Procedure

⚠ CAUTION


- You should connect the power cable into the power cable terminal and fasten it with a clamp.
- The unbalanced power must be maintained within 2% of supply rating.

If the power is unbalanced greatly, it may shorten the life of the condenser. If the unbalanced power is exceeded over 4% of supply rating, the indoor unit is protected, stopped and the error mode indicates.

- To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units within ducts. (with appropriate IP rating and material selection for your application)
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 3 mm.

- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Keep distances of 50 mm or more between power cable and communication cable.

Main power terminal block specifications

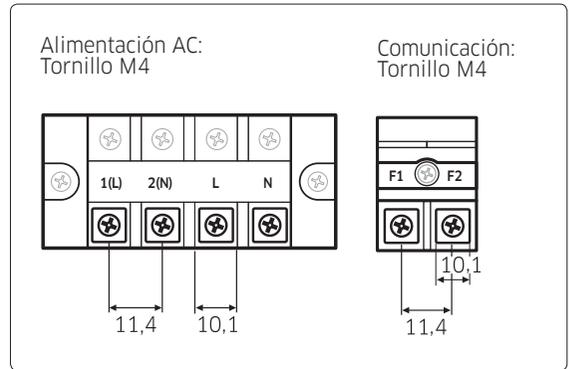

Main power cable specifications

The power cable is not supplied with air conditioner.

- Select the power supply cable in accordance with relevant local and national regulations.
- Wire size must comply with the applicable local and national code.
- Specifications for local wiring power cord and branch wiring are in compliance with local cord.

Type	Model		Outdoor unit				Input current (Amperes)				Power supply	
	Indoor unit	Outdoor unit	Rated	Voltage range			Outdoor unit		Indoor unit	Total	MCA	MFA
			Hz	Volts	Min.	Max.	Cooling	Heating				
A	AC026MN1DKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC026MNNDKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC026NNNDKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC026MNLDKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.7	11.7	11.7	12.9
	AC026MNJDKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC026MNADKH/EU	AC026MXADKH/EU	50	220 to 240	198	264	10	10	1.6	11.6	11.6	12.8
	AC035MN1DKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC035MNNDKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC035NNNDKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC035MNMMDKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	2.5	12.5	12.5	13.8
	AC035MNLDKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.7	11.7	11.7	12.9
	AC035MNJDKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.0	11.0	11.0	12.5
	AC035MNADKH/EU	AC035MXADKH/EU	50	220 to 240	198	264	10	10	1.6	11.6	11.6	12.8
	AC052MNMSEH/EU	AC052MXASEH/EU	50	220 to 240	198	264	13	13	3.5	16.5	16.5	18.2


Type	Model		Outdoor unit				Input current (Amperes)				Power supply	
	Indoor unit	Outdoor unit	Rated	Voltage range			Outdoor unit		Indoor unit	Total	MCA	MFA
			Hz	Volts	Min.	Max.	Cooling	Heating				
B	AC052MN4DKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052NN4DKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052MNNDKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052NNNDKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052MNMNDKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	2.5	22.5	22.5	25.0
	AC052MNLNDKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.7	21.7	21.7	25.0
	AC052MNC DKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052MNJDKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC052MNADKH/EU	AC052MXADKH/EU	50	220 to 240	198	264	20	20	1.6	21.6	21.6	25.0
	AC060MNNDKH/EU	AC060MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC060NNNDKH/EU	AC060MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
AC060MNMNDKH/EU	AC060MXADKH/EU	50	220 to 240	198	264	20	20	2.5	22.5	22.5	25.0	
C	AC071MN4DKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC071NN4DKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC071MN4PKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.5	21.5	21.5	25.0
	AC071MNNDKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC071NNNDKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC071MNMNDKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	2.5	22.5	22.5	25.0
	AC071MNLNDKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.7	21.7	21.7	25.0
	AC071MNC DKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.0	21.0	21.0	25.0
	AC071MNADKH/EU	AC071MXADKH/EU	50	220 to 240	198	264	20	20	1.6	21.6	21.6	25.0
	AC071MNMSEH/EU	AC071MXASEH/EU	50	220 to 240	198	264	20	20	3.5	23.5	23.5	25.0
D	AC100MNMSEH/EU	AC100MXASEH/EU	50	220 to 240	198	264	22	22	3.5	25.5	25.5	28.0

NOTE

- Voltage range
 - Units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits
- Maximum allowable voltage variation between phases is 2%.
- Wire size & type must comply with the applicable local and national code.
 - Wire size: Based on the value of MCA.
 - Wire type: 60245 IEC57(IEC) or H05RN-F(CENELEC) grade or more.
- MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker).
- MCA represents maximum input current.
 - MFA represents capacity which may accept MCA
 - Abbreviations
MCA: Min. Circuit Amps. (A)
MFA: Max. Fuse Amps. (A)

Installation Procedure

Connecting the outdoor-to-indoor power cable and the communication cable

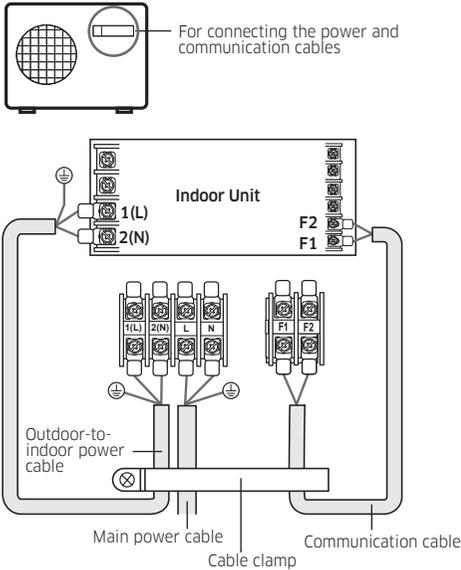


NOTE

- Lay the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.
- Ground wire for the indoor unit and outdoor unit connection cable must be clamped to a soft copper tin-plated eyelet terminal with M4 screw hole (NOT SUPPLIED WITH UNIT ACCESSORIES).

Outdoor-to-indoor power terminal specifications

- Connect the cables to the terminal board using the compressed ring terminal.
- Cover a solderless ring terminal and a connector part of the power cable and then connect it.

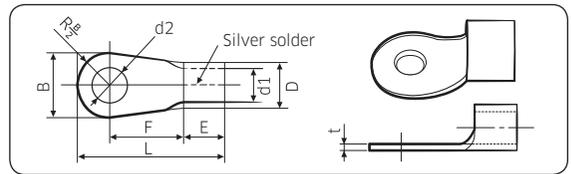

Nominal dimensions for cable (mm ²)	Nominal dimensions for screw (mm)	B		D		d1		E	F	L	d2		t
		Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)				Standard dimension (mm)	Allowance (mm)	
4/6	4	9.5	±0.2	5.6	+0.3 -0.2	3.4	±0.2	6	5	20	4.3	+0.2 0	0.9
	8	15							8.4		+0.4 0		
10	8	15	±0.2	7.1	+0.3 -0.2	4.5	±0.2	7.9	9	30	8.4	+0.4 0	1.15
16	8	16	±0.2	9	+0.3 -0.2	5.8	±0.2	9.5	13	33	8.4	+0.4 0	1.45
25	8	12	±0.3	11.5	+0.5 -0.2	7.7	±0.2	11	15	34	8.4	+0.4 0	1.7
	8	16.5							8.4		0		
35	8	16	±0.3	13.3	+0.5 -0.2	9.4	±0.2	12.5	13	38	8.4	+0.4 0	1.8
	8	22							8.4		0		
50	8	22	±0.3	13.5	+0.5 -0.2	11.4	±0.3	17.5	14	50	8.4	+0.4 0	1.8
70	8	24	±0.4	17.5	+0.5 -0.4	13.3	±0.4	18.5	20	51	8.4	+0.4 0	2.0

- Connect the rated cables only.
- Connect using a driver which is able to apply the rated torque to the screws.
- If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.

Tightening torque (kgf · cm)	
M4	12.0 to 18.0
M5	20.0 to 30.0

- $1\text{N} \cdot \text{m} = 10\text{kgf} \cdot \text{cm}$


CAUTION

- When connecting cables, you can connect the cables to the electrical part or connect them through the holes below depending on the spot.
- Connect the communication cable between the indoor and outdoor units through a conduit to protect against external forces, and feed the conduit through the wall together with refrigerant piping.
- Remove all burrs at the edge of the knock-out hole and secure the cable to the outdoor knock-out using lining and bushing with an electrical insulation such as rubber and so on.
- Must keep the cable in a protection tube.
- Keep distances of 50mm or more between power cable and communication cable.
- When the cables are connected through the hole, remove the Plate bottom.

Outdoor-to-indoor power and communication cables specifications

Indoor power supply		
Power supply	Max/Min (V)	Indoor power cable
1Φ, 220-240V, 50 Hz	±10%	1.5 mm ² ↑, 3 wires
Communication cable		
0.75 to 1.5 mm ² , 2 wires		

- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F or IEC:60245 IEC 66 / CENELEC: H07RN-F)
- When installing the indoor unit in a computer room or net work room, use the double shielded (tape aluminium / polyester braid + copper) cable of FROHH2R type.

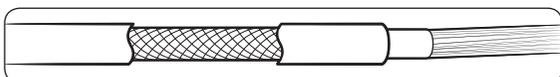

Step 4 Optional: Extending the power cable


- 1 Prepare the following tools.

Tools	Spec	Shape
Crimping pliers	MH-14	
Connection sleeve (mm)	20xØ6.5 (HxOD)	
Insulation tape	Width 19 mm	
Contraction tube (mm)	70xØ8.0 (LxOD)	

- 2 As shown in the figure, peel off the shields from the rubber and wire of the power cable.
 - Peel off 20 mm of the wire shields of the tube.


CAUTION

- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off the tube wire, you must insert a contraction tube.

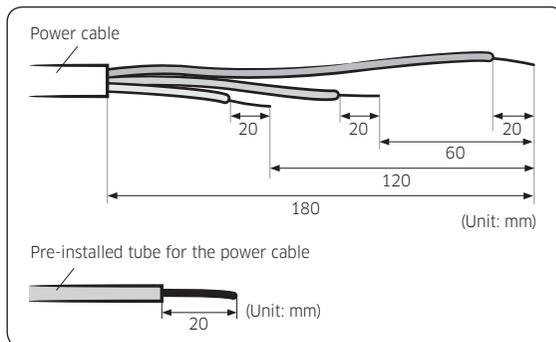


- 3 Insert both sides of core wire of the power cable into the connection sleeve.
 - **Method 1:** Push the core wire into the sleeve from both sides.
 - **Method 2:** Twist the wire cores together and push it into the sleeve.


Installation Procedure

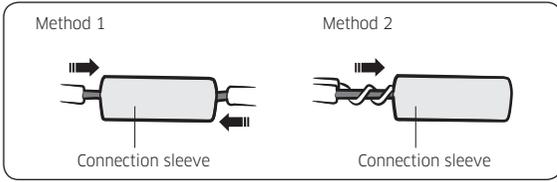

- 4 Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.
- The compression dimension should be 8.0.

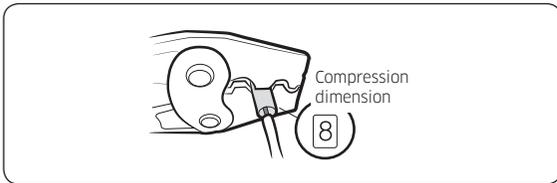


- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

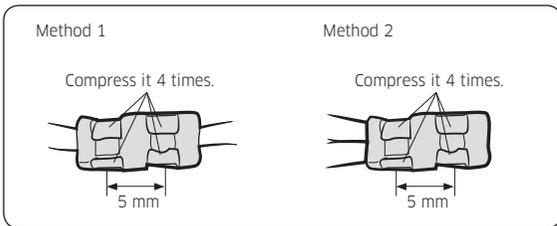


- 5 Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape.

A total of three or more layers of insulation is required.

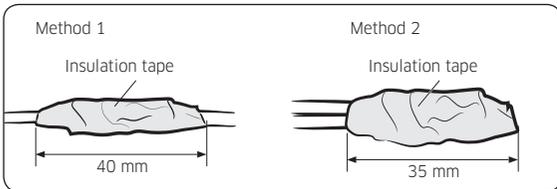


- 6 Apply heat to the contraction tube to contract it.

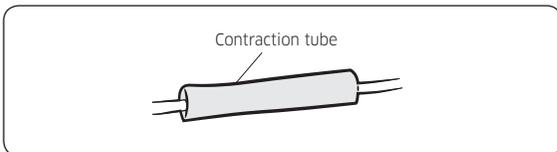

- 7 After tube contraction work is completed, wrap it with the insulation tape to finish.


CAUTION

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)

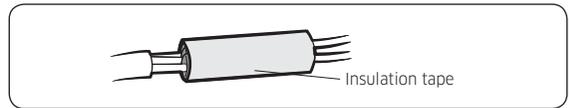

WARNING


- In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
 - Incomplete wire connections can cause electric shock or a fire.

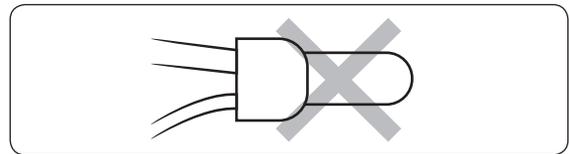

Step 5 Connecting the refrigerant pipe

Items	Maximum allowable length			
	Single installation			DPM installation
Applicable outdoor unit models	AC026MXADKH AC035MXADKH	AC052MXADKH AC060MXADKH AC052MXASEH	AC071MXADKH AC071MXASEH AC100MXASEH	AC071MXADKH
Total pipe length ($L_1+L_2+L_3$)	-	-	-	50m
Main pipe (L_1)	20m	30m	50m	30m
Max. distance among indoor units (D)	-	-	-	10m
Max. length after branch	-	-	-	15m
Max. height difference between outdoor and indoor units (h_1)	15m	20m	30m	±30m
Max. height difference among indoor units (h_2)	-	-	-	±0.5m
Max Pipe length difference among indoor units after branch (L_2-L_3)	-	-	-	±5m

* "n" means the number of indoor unit connection of DPM.

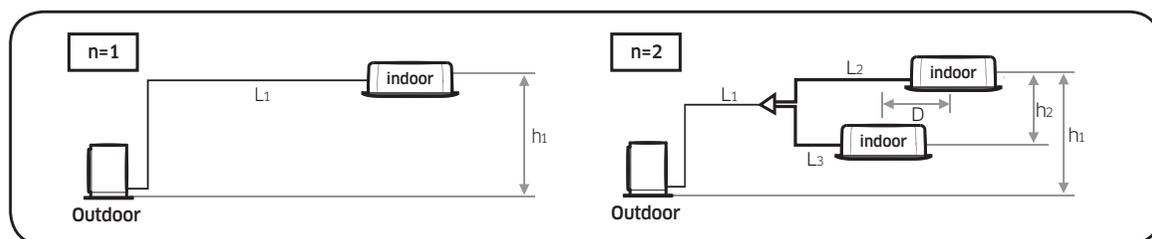

* Use a joint kit that is only for DPM.


Installation Procedure

- Temper grade and minimum thickness of the refrigerant pipe

Outer diameter [mm]	Minimum thickness [mm]	Temper grade
ø6.35	0.7	C1220T-O
ø9.52	0.7	
ø12.70	0.8	
ø15.88	1.0	
ø15.88	0.8	C1220T-1/2H OR C1220T-H
ø19.05	0.9	
ø22.23	0.9	

CAUTION

- Be sure to use C1220T-1/2H (Semi-hard) pipe for more than ø19.05 mm. If you use C1220T-O (Soft) pipe for ø19.05 mm, the pipe may be broken, which can result in an injury.

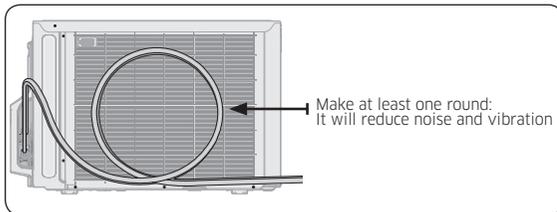


- The appearance of the unit may be different from the diagram depending on the model.

CAUTION


- After connecting the pipes with knock-out treatment, plug the space around the pipes.
- After connecting the pipes, proceed exactly as directed in the guide to prevent interference with the internal parts.

Step 6 Optional: Cutting and flaring the pipes

- 1 Make sure that you have the required tools available. (pipe cutter, reamer, flaring tool, and pipe holder)
- 2 If you wish to shorten the pipes, cut it with a pipe cutter, taking care to ensure that the cut edge remains at a 90° angle with the side of the pipe. Refer to the illustrations below for examples of edges cut correctly and incorrectly.

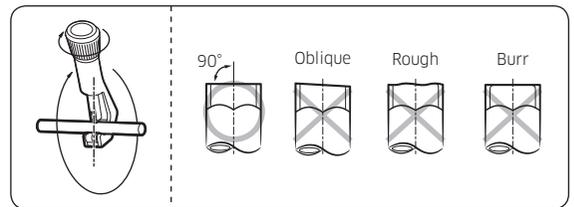


- 3 To prevent any gas from leaking out, remove all burrs at the cut edge of the pipe, using a reamer.
- 4 Slide a flare nut on to the pipe and modify the flare.

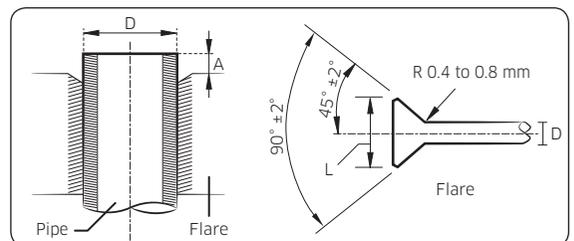

Outer diameter (D)	Depth (A)	Flare dimension (L)
ø6.35 mm	14 to 18	8.7 to 9.1 mm
ø9.52 mm	34 to 42	12.8 to 13.2 mm
ø12.70 mm	49 to 61	16.2 to 16.6 mm
ø15.88 mm	68 to 82	19.3 to 19.7 mm
ø19.05 mm	100 to 120	23.6 to 24.0 mm

- 1 N·m = 10 kgf·cm
- 5 Check that the flaring is correct, referring to the illustrations below for examples of incorrect flaring.

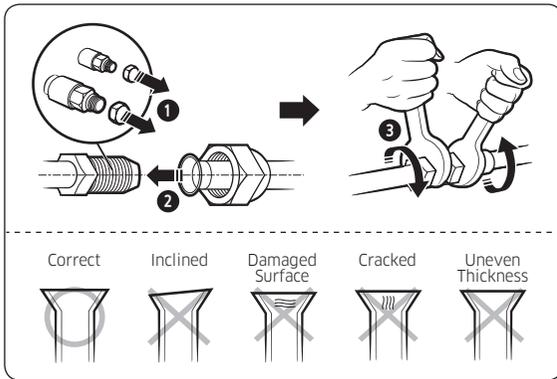

⚠ CAUTION

- If the pipes require brazing ensure that OFN(Oxygen Free Nitrogen) is flowing through the system.
- Nitrogen blowing pressure range is 0.02 to 0.05 MPa.


Step 7 Connecting up and removing air in the circuit

⚠ CAUTION

- When installing, make sure there is no leakage. When recovering the refrigerant, ground the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the service valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high. It may cause explosion and injury.

The air in the indoor unit and in the pipe must be evacuated. If air remains in the refrigerant pipes, it will affect the compressor either reduce cooling/heating capacity or lead to a malfunction. Refrigerant for air purging is not charged in the outdoor unit. Use Vacuum Pump as shown at the right figure.


- 1 Connect each assembly pipe to the appropriate valve on the outdoor unit and tighten the flare nut.
- 2 Referring to the illustration below, tighten the flare nut on section D first manually and then with a torque wrench, applying the following torque.

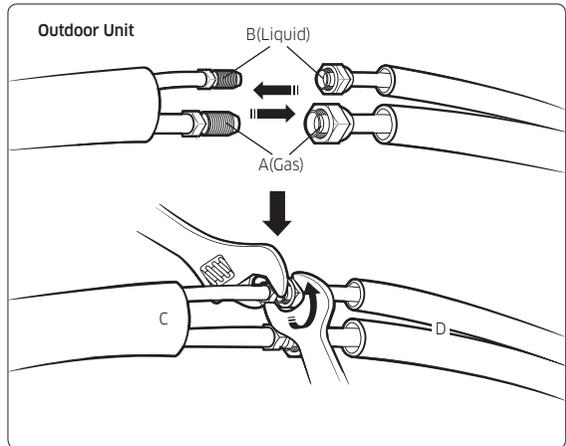

- 3 Connect the charging hose of low pressure side of manifold gauge to the packed valve having a service port as shown at the figure.

⚠ CAUTION

- The designs and shape are subject to change according to the model.
- 4 Open the valve of the low pressure side(A) of manifold gauge anticlockwise.

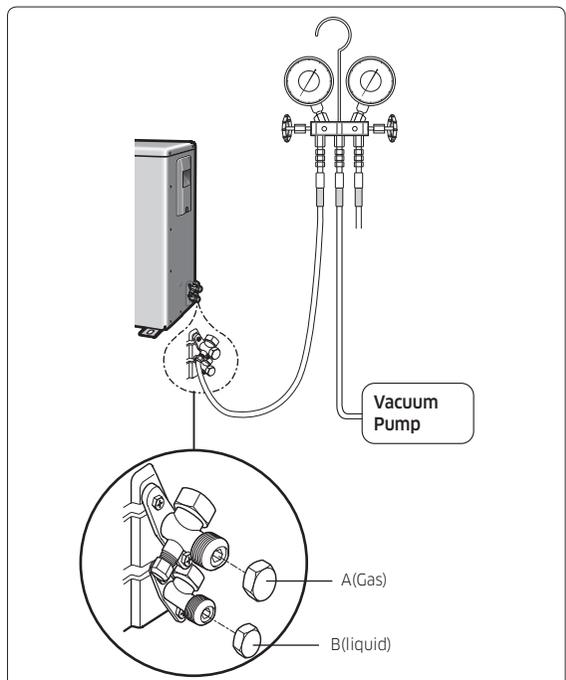

Installation Procedure

- 5 Purge the air from the system using vacuum pump for about 10 minutes.
 - Close the valve of the low pressure side of manifold gauge clockwise.
 - Make sure that pressure gauge shows -0.1 MPa (-76 cmHg) after about 10 minutes. This procedure is very important to avoid a gas leak.
 - Turn off the vacuum pump.
 - Remove the hose of the low pressure side of manifold gauge.
- 6 Open the stop valve of both liquid and gas sides.
- 7 Mount the valve stem nuts and the service port cap to the valve, and tighten them at the torque of 183kgf·cm with a torque wrench.
- 8 Check for gas leakage.
 - At this time, especially check for gas leakage from the 3-way valve's stem nuts(A port), and from the service port cap.

⚠ CAUTION


- Connect the indoor and outdoor units using pipes with flared connections (not supplied). For the lines, use insulated, unwelded, degreased and deoxidized copper pipe, (Cu DHP type to ISO 1337 or UNI EN 12735-1), suitable for operating pressures of at least 4200 kPa and for a burst pressure of at least 20700 kPa. Copper pipe for hydro-sanitary applications is completely unsuitable.
- For sizing and limits (height difference, line length, max. bends, refrigerant charge, etc.) see "Connecting refrigerant pipe section".

Step 8 Adding refrigerant (R-410A)

The outdoor unit is loaded with sufficient refrigerant for the standard piping. Thus, refrigerant must be added if the piping is lengthened. This operation can only be performed by a qualified refrigeration specialist. To determine the quantity of refrigerant charge, see **Calculating the quantity of refrigerant to add** on page 19.

- 1 Check if the stop valve is closed completely.
- 2 Charge the refrigerant through the service port of the liquid stop valve.
- 3 If you have any difficulty charging the refrigerant as described in the steps above, take the following steps:

- a Open the liquid stop valve and gas stop valve.
- b Operate the air conditioner by pressing the K2 key on the outdoor unit PCB.
- c After about 30 minutes, charge the refrigerant through the service port of the gas stop valve.

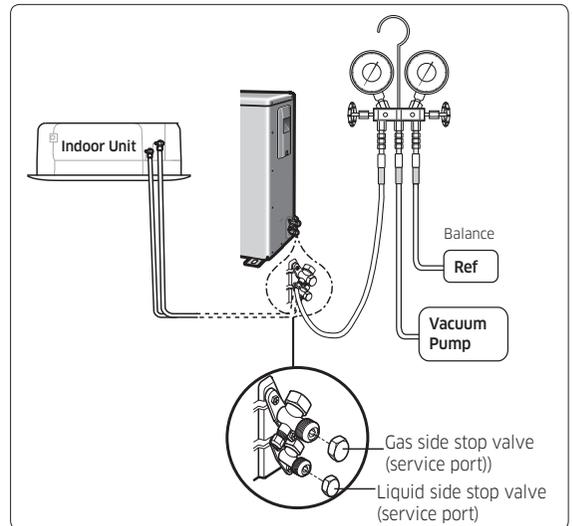

Important information: regulation regarding the refrigerant used


This product contains fluorinated greenhouse gases. Do not vent gases into the atmosphere.

⚠ CAUTION

- Inform user if the system contains 5 tCO₂e or more of fluorinated greenhouse gases. In this case, it must be checked for leakage at least once every 12 months, according to regulation No. 517/2014. This activity must be covered by qualified personnel only. In the case of the situation above, the installer (or authorized person with responsibility for final check) must provide a maintenance book, with all the information recorded, according to REGULATION (EU) No. 517/2014 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on fluorinated greenhouse gases.

Please fill in the following with indelible ink on the refrigerant charge label supplied with this product and on this manual.

- ①: The factory refrigerant charge of the product.
- ②: The additional refrigerant amount charged in the field.
- ① + ②: The total refrigerant charge.

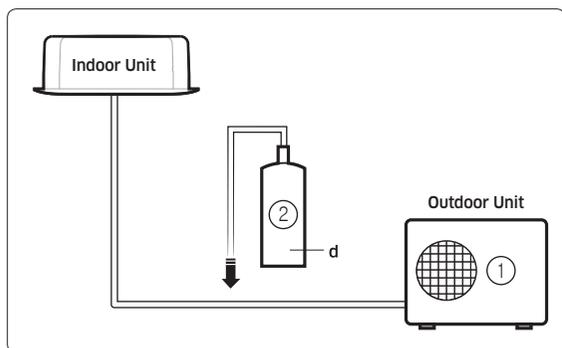

Unit	kg	tCO ₂ e
①, a		
②, b		
① + ②, c		

Refrigerant type	GWP value
R-410A	2088

- GWP: Global Warming Potential
- Calculating tCO₂e : kg x GWP/1000

NOTE

- Factory refrigerant charge of the product: see unit name plate
- Additional refrigerant amount charged in the field(Refer to the above information for the quantity of refrigerant replenishment.)
- Total refrigerant charge
- Refrigerant cylinder and manifold for charging

Calculating the quantity of refrigerant to add

The quantity of additional refrigerant is variable according to the installation situation. Thus, make sure the outdoor unit situation before adding refrigerant. This operation can only be performed by a qualified refrigeration specialist.

When installing the outdoor unit only

Model	Interconnection pipe length (m)					
	0 to 5	5 to 10	10 to 20	20 to 30	30 to 40	40 to 50
AC026MXADKH AC035MXADKH	0	0	0			
AC052MXADKH AC060MXADKH AC052MXASEH	0	+10 g/m over 5 m				
AC071MXADKH AC071MXASEH		+20 g/m over 5 m				
AC100MXASEH		0			+50 g/m over 30 m	

DPM installation outdoor unit

Model	Diameter of L ₁ , a & b pipe	Installation condition	Amount of additional refrigerant charging
AC071MXADKH	Φ 6.35	L ₁ + L ₂ + L ₃	(L ₁ -5) × 30[g] + (L ₂ +L ₃) × 30[g]

Installation Procedure

Step 9 Optional: Installing DPM

DPM allowable Outdoor and indoor unit models

DPM allowable Outdoor and indoor unit models	
Outdoor unit models	2 indoor units connection
	Indoor unit
AC071MXADKH	AC035MN1DKH
	AC035MNNDKH
	AC035MNMDKH
	AC035MNLDKH
	AC035MNJDKH
	AC035MNADKH

* Installation of multiple indoor units should consist of units that have the same capacity.

e.g. When you install the AC071MXADKH outdoor unit as DPM combination such as 2 indoor units connection, only the combination on the table is available.

Space requirements for indoor and outdoor units and piping installation


(Refer to page 15 installation specification.)

- ▶ Two indoor units should be installed in one area which is not divided by a wall.
- ▶ The distance between two indoor units should be within a straight-line of 10m.
- ▶ After branching, the distance between the piping connected to the two indoor units should be within 5m.
- ▶ The height difference between two units should be within 0.5m.
- ▶ Use the joint KIT that is only for DPM. (Please refer to the table below)

DPM KIT	2-Indoor units connection	3-Indoor units connection	4-Indoor units connection
	MXJ-2D2509K	MXJ-3D2509K	MXJ-4D2509K

Connecting communication line and wired remote controller

In case of 2 indoor units connection

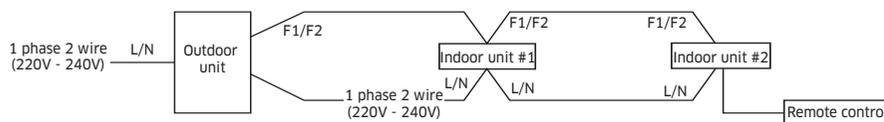

* The wired remote controller can be used with any of the DPM indoor units.

Operation and specification

- ▶ The two, the three, or the four sets of the indoor units with DPM installation which are controlled by wired and wireless remote controller work equally. (All controls such as ON/OFF, cooling/heating/dehumidification/ventilation, high/ medium/low wind.)
- ▶ Thermo OFF which stops when indoor temperature reaches set temperature works by the average sensor value of the indoor temperature of the all indoor units.
- ▶ When one of the several indoor units has a problem, they protect operation or stop working.

Instruction for installation and operation

- ▶ You should install the DPM according to the above installation specification and eliminate the factors that give electrical load to the both indoor units when installing and operating. (Heater / window / front door / ventilation / partition that divides space)
- ▶ You should provide sufficient instructions about the operation method and specification features to users and fill in caution phrases on wired remote controller when necessary.
 - <The air-conditioners in this area are special type to be controlled simultaneously.>

Set up indoor quantity by key switch(K1, K2)

- ▶ Press and hold K1 switch to enter the setting mode on the number of the installed indoor unit : Check "A0" sign on 7-segment
 - Press K2 switch to set the number of the installed indoor unit :
 - Ex) If there are two indoor units, press K2 switch twice, and check "A2" sign on 7-segment.
 - If there are three indoor units, press K2 switch three times, and check "A3" sign on 7-segment.
 - If there are four indoor units, press K2 switch four times, and check "A4" sign on 7-segment.
 - Press K1 switch to complete setting the number of the installed indoor unit : Check "AA" sign on 7-segment.


Step 10 Performing the gas leak test

LEAK TEST WITH NITROGEN (before opening valves)

In order to detect basic refrigerant leaks, before recreating the vacuum and recirculating the R-410A, it is the responsibility of the installer to pressurize the whole system with nitrogen (using a cylinder with pressure reducer) at a pressure above 0.2MPa, less than 4MPa (gauge).

LEAK TEST WITH R-410A (after opening valves)

Before opening valves, discharge all the nitrogen into the system and create vacuum. After opening valves check leaks using a leak detector for refrigerant R-410A. Once you have completed all the connections, check for possible leaks using leak detector specifically designed for HFC refrigerants.

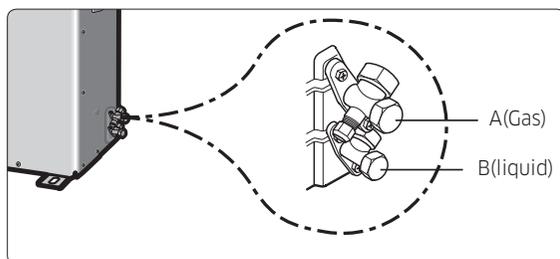


- The designs and shape are subject to change according to the model.

Step 11 Connecting the drain hose to the outdoor unit

When using the air conditioner in the heating mode, ice may accumulate . During de-icing (defrost operation), the condensed water must be drained off safely. Consequently, you must install a drain hose on the outdoor unit, following the instructions below.

- 1 Make space more than "A" mm between the bottom of the outdoor unit and the ground for installation of the drain hose, as shown in figure.
- 2 Insert the drain plug into the hole on the underside of the outdoor unit.
- 3 Connect the drain hose to the drain plug.
- 4 Ensure that the drained water runs off correctly and safely.

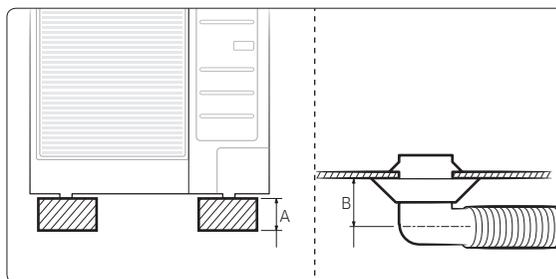


Model	A	B
AC026MXADKH AC035MXADKH AC052MXASEH AC052MXADKH AC060MXADKH AC071MXADKH AC071MXASEH	80mm	30mm
AC100MXASEH	50mm	13mm


- 5 Be sure to plug the rest of drain holes not connected with drain plugs using drain caps.

Installation Procedure


* 026/035 * /AC052MXASEH

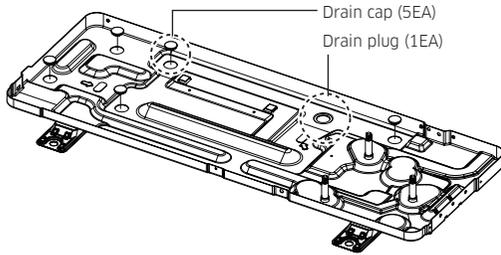

AC052MXADKH / * 060/071 *

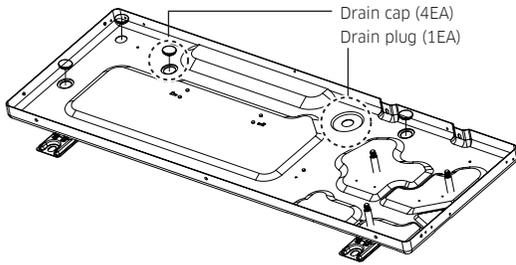

AC100MXASEH

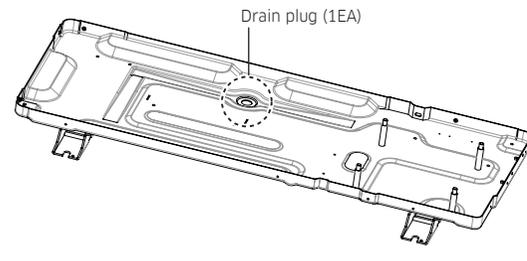


- When installing the product, make sure that the rack is not placed under the drain hole.
- If the product is installed in a region of heavy snow, allow enough separation distance between the product and the ground.

Step 12 Insulating the refrigerant pipes

Once you have checked that there are no leaks in the system, you can insulate the piping and hose.

- 1 To avoid condensation problems, place an insulator around each refrigerant pipe.

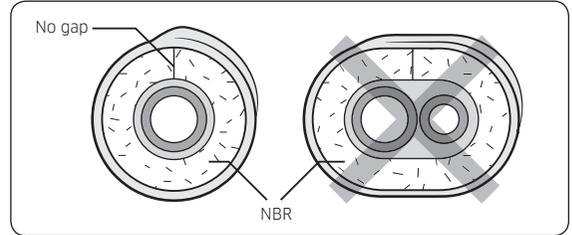

NOTE

- When insulate the pipe, be sure to overlap the insulation.
- The insulation has to be produced in full compliance of European regulation reg. EEC / EU 2037/ 2000 that requires the use of sheaths insulation form without using CFC and HCFC gases for health and the environment.

CAUTION

- When insulating the pipe, use non-slit insulator.
- 2 Select the insulation of the refrigerant pipe.
 - Insulate the gas side and liquid side pipe referring to the thickness according to the pipe size.
 - Less than indoor temperature of 30°C and humidity of 85% is the standard condition. If installing in a high humidity condition, use one grade thicker insulator by referring to the table below. If installing in an unfavourable conditions, use thicker one.
 - Insulator's heat-resistance temperature should be more than 120°C.

Pipe	Pipe size	Insulation Type (Heating/Cooling)		Remarks
		Standard [Less than 30°C, 85%]	High humidity [over 30°C, 85%]	
		EPDM, NBR		
Liquid pipe	Ø6.35~Ø9.52	9 t	9 t	Internal temperature is higher than 120°C
	Ø12.7~Ø19.05	13 t	13 t	
Gas pipe	Ø6.35	13 t	19 t	
	Ø9.52~Ø19.05	19 t	25 t	

- When installing insulation in places and conditions below, use the same insulation that is used for

high humidity conditions.

<Geological condition>

- High humidity places such as shoreline, hot spring, near lake or river, and ridge (when the part of the building is covered by earth and sand.)

<Operation purpose condition>

- Restaurant ceiling, sauna, swimming pool etc.
- <Building construction condition>
- The ceiling frequently exposed to moisture and cooling is not covered.
- e.g. The pipe installed at a corridor of a dormitory and studio or near an exit that opens and closes frequently.
- The place where the pipe is installed is highly humid due to the lack of ventilation system.


Step 13 Checking the earthing

If the power distribution circuit does not have a earthing or the earthing does not comply with specifications, an earthing electrode must be installed. The corresponding accessories are not supplied with the air conditioner.

- 1 Select an earthing electrode that complies with the specifications given in the illustration.
- 2 Connect the flexible hose to the flexible hose port.
 - In damp hard soil rather than loose sandy or gravel soil that has a higher earthing resistance.
 - Away from underground structures or facilities, such as gas pipes, water pipes, telephone lines and underground cables.
 - At least two metres away from a lightning conductor earthing electrode and its cable.

NOTE

- The earthing wire for the telephone line cannot be used to ground the air conditioner.

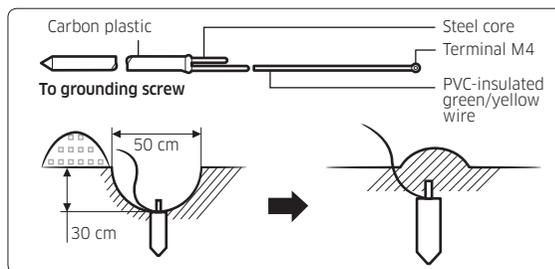

- 3 Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.
- 4 Install a green/yellow coloured earthing wire:
 - If the earthing wire is too short, connect an extension lead in a mechanical way and wrap it with insulating tape (do not bury the connection).
 - Secure the earthing wire in position with staples.

NOTE

- If the earthing electrode is installed in an area with heavy traffic, its wire must be connected securely.
- 5 Carefully check the installation by measuring the earthing resistance with a earth resistance tester. If the resistance is above the required level, drive the electrode deeper into the ground or increase the number of earthing electrodes.
 - 6 Connect the earthing wire to the electrical component box inside of the outdoor unit.

Step 14 Performing final check and trial operation

- 1 Check the power supply between the outdoor unit and the auxiliary circuit breaker.
 - 1 phase power supply: L, N
 - 3 phases power supply: R, S, T, N
- 2 Check the indoor unit.
 - a Check that you have connected the power and communication cables correctly. (If the power cable and communication cables are mixed up or connected incorrectly, the PCB will be damaged.)
 - b Check that the thermistor sensor, drain pump/hose, and display are connected correctly.
- 3 Press K1 or K2 on the outdoor unit PCB to run the test mode and stop.


Installation Procedure

Key	Push type		Mode	Display			
				SEG 1	SEG 2	SEG 3	SEG 4
K1	Short	1st	Heating test mode	F	7	8	8
		2nd	Defrost test mode*	F	3	8	8
		3rd	Stop	8	8	8	8
K2	Short	1st	Cooling test	F	2	8	8
		2nd	Inverter check	F	4	8	8
		3rd	Pump down	F	b	8	8
		4th	Stop	8	8	8	8
K3	Short	1st	Reset Release Eco mode*	8	8	8	8

※ Defrost test mode

Condition 1: The outdoor temperature is under 10°C

Condition 2: All the temperature conditions should meet the defrost conditions

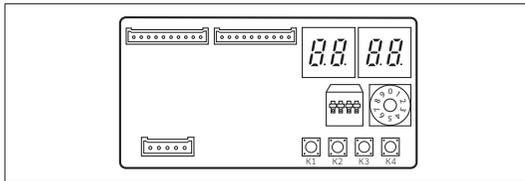

- 4 After 12 minutes of stationary condition check each indoor unit air treatment:
 - Cooling mode (indoor unit check) → Inlet air temp. - Outlet air temp.: From 10°C to 12°C
 - Heating mode (indoor unit check) → Outlet air temp. - Inlet air temp.: From 11°C to 14°C
 - In heating mode, the indoor fan motor can remain off to avoid cold air blown into air-conditioned space.
- 5 How to reset the power supply of the outdoor unit and deactivate the eco mode (standby mode):
 - Press K3 button over 1 sec to reset the power supply of the outdoor unit and deactivate the eco mode (standby mode).

※ Eco mode : Standby for minimizing power onsumption

- 6 View mode: When the K4 switch is pressed, you can see information about our system state as below.

K4 short push	Display contents	SEG1	SEG2	SEG3	SEG4	Unit
1	Order frequency	1	Hundreds digit	Tens digit	Units digit	Hz
2	Current frequency	2	Hundreds digit	Tens digit	Units digit	Hz
3	The number of preset indoor units	3	Hundreds digit	Tens digit	Units digit	EA
4	Ambient temperature sensor	4	+ / -	Tens digit	Units digit	°C
5	Compressor discharge sensor	5	Hundreds digit	Tens digit	Units digit	°C
6	Eva sensor	6	+ / -	Tens digit	Units digit	°C
7	Condensor sensor	7	+ / -	Tens digit	Units digit	°C
8	Current	8	Tens digit	Units digit	The first place of decimals	A
9	Fan RPM	9	Thousands digit	Hundreds digit	Tens digit	rpm
10	Target discharge temperature	A	Hundreds digit	Tens digit	Units digit	°C
11	EEV	B	Hundreds digit	Tens digit	Units digit	step
12	The capacity sum of indoor units	C	Tens digit	Unit digit	The first place of decimals	kW
13	Protective control	D	0: Cooling 1: Heating	Protective control 0: No Protective control 1: Freezing 2: Non-stop defrosting 3: Over-load 4: Discharge 5: Total electric current	Frequency status 0: Normal 1: Hold 2: Down 3: Up_limit 4: Down_limit	-
14	IPM temperature	E	Hundreds digit	Tens digit	Units digit	-
15	The number of connected indoor units	F	0	Tens digit	Units digit	EA


		Display contents	SEG1	SEG2	SEG3	SEG4
K4 long push	-	Main micom version	Year (Dec)	Month (Hex)	Date (Tens digit)	Date (Units digit)
	After short push 1	Inverter micom version	Year (Dec)	Month (Hex)	Date (Tens digit)	Date (Units digit)
	After short push 2	E2P version	Year (Dec)	Month (Hex)	Date (Tens digit)	Date (Units digit)
	After short push 3	Page1 -AUTO Page2 - (SEG1,2 - Indoor unit: "A","0")(SEG3,4 - Address: ex) 00)				
	After short push 4	Page1 -MANU Page2 - (SEG1,2 - Indoor unit: "A","0")(SEG3,4 - Address: ex) 00)				

- Long push K4 (Main micom ver.) → short push 1 more (Inv. micom ver.) → short push 1 more (E2P. ver.)


Installation Procedure

7 DIP switch option

AC026/035/052/060/071**

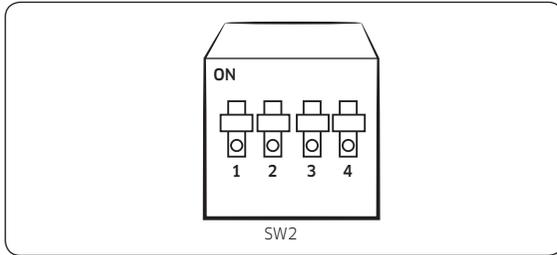

AC100**

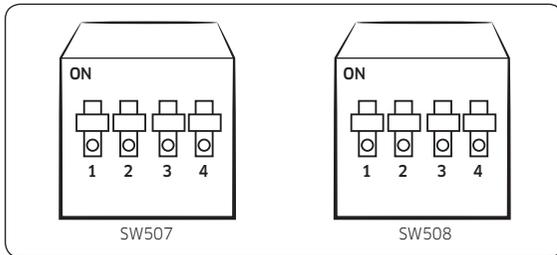

- SW2 and SW507 option

	On (default)	Off
Switch 1	-	-
Switch 2	Disable snow prevention control	Enable snow prevention control
Switch 3	Silence mode option	
Switch 4		

Switch 3	Switch 4	Operation
On	On	Disable Silence mode
On	Off	Silence mode step 1
Off	On	Silence mode step 2
Off	Off	Silence mode step 3

- When snow prevention mode is in use, eco mode (standby mode) will not work.

- SW508 option

	On (default)	Off
Switch 1	Auto Silence mode	Manual Silence mode
Switch 2	-	-
Switch 3	-	-
Switch 4	-	-

8 Setting the address manually (high level controller)

- Turn off the air conditioner, press and hold the K2 switch for a while to enter the Option mode. (Initial value: 00AU)
 - You cannot enter the Option mode when the air conditioner is running.
- Set the address in SEG3 and SEG4 by pressing the K2 switch shortly.

Option	SEG1	SEG2	SEG3	SEG4	Function
Channel address	0	0	A	U	The address is set automatically.
			00 to 15		The address is set manually. You can set a value from 0 to 15.

- Press and hold the K2 switch for a while to save the address and exit the Option mode. Each segment will flicker for 3 seconds in the current display state. Then if you need to change the address, reset the system, and then repeat all steps again. Press and hold the K1 switch to exit without save.

* If you want to restore the setting to factory default, press and hold the K4 button while you are in the option setting mode.

- If you press and hold the K4 button, setting will be restored to factory default but it doesn't mean that restored setting is saved. Press and hold the K2 button. When the segments shows that tracking mode is in progress, setting will be saved.

Extra Procedures

Pumping down refrigerant


WARNING

- After installing the product, be sure to perform leak tests on the piping connections. After pumping down refrigerant to inspect or relocate the outdoor unit, be sure to stop the compressor and then remove the connected pipes.
 - Do not operate the compressor while a valve is open due to refrigerant leakage from a pipe or an unconnected or incorrectly connected pipe. Failure to do so may cause air to flow into the compressor and too a high pressure to develop inside the refrigerant circuit, leading to an explosion or product malfunction.

Pump-down is an operation intended to collect all the system refrigerant in the outdoor unit.

This operation must be carried out before disconnecting the refrigerant pipe in order to avoid refrigerant loss to the atmosphere.

- 1 Turn the system on in cooling with fan operating at high velocity and then let the compressor run for more than 5 minutes. (Compressor will immediately start, provided 3 minutes have elapsed since the last stop.)
- 2 Release the valve caps on High and Low pressure side.
- 3 Use L-wrench to close the valve on the high pressure side.
- 4 After approximately 2 minute, close the valve on the low pressure side.
- 5 Stop operation of the air conditioner by pressing the (Power) button on the indoor unit or remote control.
- 6 Disconnect the pipes.

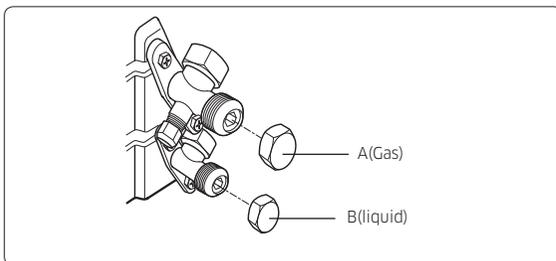

Relocating the indoor and outdoor units

- 1 Pump down refrigerant. See **Pumping down refrigerant** on page 27.
- 2 Remove the power cord.
- 3 Disconnect the assembly cable from the indoor and outdoor units.
- 4 Remove the flare nuts connecting the indoor units and the pipes. At this time, cover the pipes of the indoor unit and the other pipes using a cap or vinyl plug to avoid foreign material entering.
- 5 Disconnect the pipes connected to the outdoor units. At this time, cover the valve of the outdoor units and the other pipes using a cap or vinyl plug to avoid foreign material entering.


Note: Make sure you do not bend the connection pipes in the middle and store together with the cables.

- 6 Move the indoor and outdoor units to a new location.
- 7 Remove the mounting plate for the indoor unit and move it to a new location.

Using the stop valve

Opening the stop valve

- 1 Open the cap and turn the stop valve anticlockwise by using a hexagonal wrench.
- 2 Turn it until the axis is stopped.

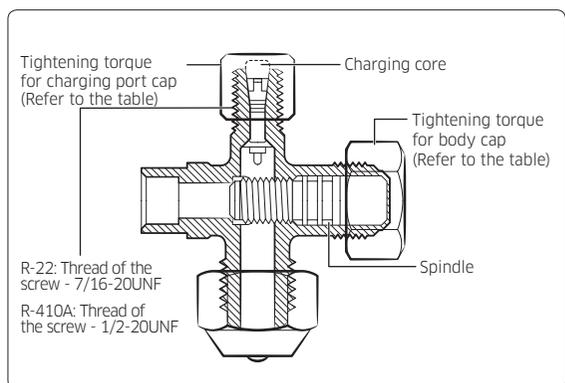

Extra Procedures

3 Tighten the cap securely.

Outer Diameter (mm)	Tightening torque	
	Body cap (N•m)	Charging port cap (N•m)
Ø6.35	20 to 25	10 to 12
Ø9.52	20 to 25	
Ø12.70	25 to 30	
Ø15.88	30 to 35	
Over Ø19.05	35 to 40	

(1 N•m=10 kgf•cm)



NOTE

- Do not apply excessive force to the stop valve and always use special instruments. Otherwise, the stopping box can be damaged and the back sheet can leak.
- If the watertight sheet leaks, turn the axis back by half, tighten the stopping box, then check the leakage again. If there is no leakage any more, tighten the axis entirely.

Closing the stop valve

- 1 Remove the cap.
- 2 Turn the stop valve clockwise by using a hexagonal wrench.
- 3 Tighten the axis until the valve reached the sealing point.
- 4 Tighten the cap securely.



CAUTION

- When you use the service port, always use a charging hose, too.
- Check the leakage of refrigerant gas after tightening the cap.
- Must use a spanner and wrench when you open/ tighten the stop valve.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC026MN1DKH / AC026MXADKH	AC026MNNDKH / AC026MXADKH	AC026NNNDKH / AC026MXADKH	AC026MNLDKH / AC026MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	52 / 59	48 / 59	48 / 59	53 / 59
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,2	6,9	6,9	6,1
G	Energy efficiency class (SEER)	-	A++	A++	A++	A++
H	Q _{CE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	147	132	132	149
I	P _{designc}	kW	2,6	2,6	2,6	2,6
J	SCOP (Average)	-	4,0	4,3	4,3	4,0
K	Energy efficiency class SCOP (Average)	-	A+	A+	A+	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	700	684	684	700
M	P _{designh} (Average)	kW	2,0	2,1	2,1	2,0
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity (Average)	kW	2,0	2,1	2,1	2,0
P	Other heating seasons suitable for use	-	- ¹¹⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC026MNJDKH / AC026MXADKH	AC026MNADKH / AC026MXADKH	AC035MN1DKH / AC035MXADKH	AC035MNNDKH / AC035MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	53 / 59	56 / 59	55 / 61	50 / 61
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,3	6,4	6,1	6,8
G	Energy efficiency class (SEER)	-	A++	A++	A++	A++
H	Q _{CE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	144	142	201	180
I	P _{designc}	kW	2,6	2,6	3,5	3,5
J	SCOP (Average)	-	4,6	4,0	4,0	4,3
K	Energy efficiency class SCOP (Average)	-	A++	A+	A+	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	670	700	700	684
M	P _{designh} (Average)	kW	2,2	2,0	2,0	2,1
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity(Average)	kW	2,2	2,0	2,0	2,1
P	Other heating seasons suitable for use	-	- ¹⁰⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

- 2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.
- 3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC035NNNDKH / AC035MXADKH	AC035MNMDKH / AC035MXADKH	AC035MNLDKH / AC035MXADKH	AC035MNJDKH / AC035MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	50 / 61	52 / 61	53 / 61	55 / 61
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,8	6,3	5,9	6,1
G	Energy efficiency class (SEER)	-	A++	A++	A+	A++
H	Q _{ce} ²⁾ (cooling season)	kWh/a ¹⁰⁾	180	194	208	201
I	P _{designc}	kW	3,5	3,5	3,5	3,5
J	SCOP (Average)	-	4,3	4,0	4,0	4,3
K	Energy efficiency class SCOP (Average)	-	A+	A+	A+	A+
L	Q _{he} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	684	630	700	716
M	P _{designh} (Average)	kW	2,1	1,8	2,0	2,2
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity (Average)	kW	2,1	1,8	2,0	2,2
P	Other heating seasons suitable for use	-	- ¹¹⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{he} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{he} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC035MNADKH / AC035MXADKH	AC052MN4DKH / AC052MXADKH	AC052NN4DKH / AC052MXADKH	AC052MNNDKH / AC052MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	59 / 61	49 / 62	49 / 62	56 / 62
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,3	6,9	6,9	6,5
G	Energy efficiency class (SEER)	-	A++	A++	A++	A++
H	Q _{EE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	194	254	254	269
I	P _{designc}	kW	3,5	5,0	5,0	5,0
J	SCOP (Average)	-	4,0	4,3	4,3	4,1
K	Energy efficiency class SCOP (Average)	-	A+	A+	A+	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	700	847	847	888
M	P _{designh} (Average)	kW	2,0	2,6	2,6	2,6
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity(Average)	kW	2,0	2,6	2,6	2,6
P	Other heating seasons suitable for use	-	- ¹⁰⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

- 2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.
- 3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC052NNNDKH / AC052MXADKH	AC052MNMDKH / AC052MXADKH	AC052MNLDKH / AC052MXADKH	AC052MNC DKH / AC052MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	56 / 62	55 / 62	55 / 62	60 / 62
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,5	6,2	6,1	6,1
G	Energy efficiency class (SEER)	-	A++	A++	A++	A++
H	Q _{CE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	269	282	287	287
I	P _{designc}	kW	5,0	5,0	5,0	5,0
J	SCOP (Average)	-	4,1	4,1	3,9	3,9
K	Energy efficiency class SCOP (Average)	-	A+	A+	A	A
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	888	820	862	862
M	P _{designh} (Average)	kW	2,6	2,4	2,4	2,4
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity (Average)	kW	2,6	2,4	2,4	2,4
P	Other heating seasons suitable for use	-	- ¹¹⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC052MNJDKH / AC052MXADKH	AC052MNADKH / AC052MXADKH	AC060MNNDKH / AC060MXADKH	AC060NNNDKH / AC060MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	60 / 62	60 / 62	56 / 62	56 / 62
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	5,9	6,2	6,2	6,2
G	Energy efficiency class (SEER)	-	A+	A++	A++	A++
H	Q _{EE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	297	282	327	327
I	P _{designc}	kW	5,0	5,0	5,8	5,8
J	SCOP (Average)	-	3,8	3,8	4,0	4,0
K	Energy efficiency class SCOP (Average)	-	A	A	A+	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	1032	884	910	910
M	P _{designh} (Average)	kW	2,8	2,4	2,6	2,6
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity(Average)	kW	2,8	2,4	2,6	2,6
P	Other heating seasons suitable for use	-	- ¹⁰⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

- 2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.
- 3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.			
B	Model name (Indoor/Outdoor)	-	AC060MNMDKH / AC060MXADKH	AC071MN4DKH / AC071MXADKH	AC071NN4DKH / AC071MXADKH	AC071MN4PKH / AC071MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	56 / 62	53 / 65	53 / 65	53 / 65
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088	2088
F	SEER	-	6,1	6,2	6,2	6,2
G	Energy efficiency class (SEER)	-	A++	A++	A++	A++
H	Q _{CE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	333	401	401	401
I	P _{designc}	kW	5,8	7,1	7,1	7,1
J	SCOP (Average)	-	4,0	4,1	4,1	4,1
K	Energy efficiency class SCOP (Average)	-	A+	A+	A+	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	910	1537	1537	1537
M	P _{designh} (Average)	kW	2,6	4,5	4,5	4,5
N	Back up heating capacity (Average)	kW	0	0	0	0
O	Declared capacity (Average)	kW	2,6	4,5	4,5	4,5
P	Other heating seasons suitable for use	-	- ¹¹⁾			
Q	SCOP (Warmer)	-	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-	-
W	SCOP (Colder)	-	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011ⁱ⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)ⁱⁱ⁾

A	Supplier's name	-	Samsung Electronics Co.. Ltd.		
B	Model name (Indoor/Outdoor)	-	AC071MNNDKH / AC071MXADKH	AC071NNNDKH / AC071MXADKH	AC071MNMDKH / AC071MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	58 / 65	58 / 65	56 / 65
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088
F	SEER		6,0	6,0	6,1
G	Energy efficiency class (SEER)	-	A+	A+	A++
H	Q _{EE} ²⁾ (cooling season)	kWh/a ⁱⁱⁱ⁾	397	397	407
I	P _{designc}	kW	6,8	6,8	7,1
J	SCOP (Average)	-	3,8	3,8	4,0
K	Energy efficiency class SCOP (Average)	-	A	A	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ⁱⁱⁱ⁾	1474	1474	1295
M	P _{designh} (Average)	kW	4,0	4,0	3,7
N	Back up heating capacity (Average)	kW	0	0	0
O	Declared capacity(Average)	kW	4,0	4,0	3,7
P	Other heating seasons suitable for use	-	- ^{iv)}		
Q	SCOP (Warmer)	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ⁱⁱⁱ⁾	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-
W	SCOP (Colder)	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ⁱⁱⁱ⁾	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

- 2** Energy consumption “XYZ” kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.
- 3** Energy consumption “XYZ” kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

COMMISSION DELEGATED REGULATION (EU) No 626/2011¹⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)¹⁾

A	Supplier's name	-	Samsung Electronics Co., Ltd.		
B	Model name (Indoor/Outdoor)	-	AC071MNLDKH / AC071MXADKH	AC071MNCDKH / AC071MXADKH	AC071MNADKH / AC071MXADKH
C	Sound Power Level (Inside/Outside)	dB(A)	59 / 65	64 / 65	61 / 65
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088
F	SEER	-	5,9	5,6	6,3
G	Energy efficiency class (SEER)	-	A+	A+	A++
H	Q _{CE} ²⁾ (cooling season)	kWh/a ¹⁰⁾	421	444	394
I	P _{designc}	kW	7,1	7,1	7,1
J	SCOP (Average)	-	3,9	3,9	4,0
K	Energy efficiency class SCOP (Average)	-	A	A	A+
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ¹⁰⁾	1328	1256	1260
M	P _{designh} (Average)	kW	3,7	3,5	3,6
N	Back up heating capacity (Average)	kW	0	0	0
O	Declared capacity (Average)	kW	3,7	3,5	3,6
P	Other heating seasons suitable for use	-	- ¹⁰⁾		
Q	SCOP (Warmer)	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ¹⁰⁾	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-
W	SCOP (Colder)	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ¹⁰⁾	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

2 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

3 Energy consumption "XYZ" kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

Appendix

COMMISSION DELEGATED REGULATION (EU) No 626/2011ⁱ⁾

PRODUCT FICHE (ENERGY LABELLING OF AIR CONDITIONERS)ⁱⁱ⁾

A	Supplier's name	-	Samsung Electronics Co.. Ltd.		
B	Model name (Indoor/Outdoor)	-	AC052MNMSEH / AC052MXASEH	AC071MNMSEH / AC071MXASEH	AC100MNMSEH / AC100MXASEH
C	Sound Power Level (Inside/Outside)	dB(A)	55 / 64	57 / 65	62 / 69
D	Refrigerant name ¹⁾	-	R-410A	R-410A	R-410A
E	GWP	-	2088	2088	2088
F	SEER	-	5.5	5.5	5.5
G	Energy efficiency class (SEER)	-	A	A	A
H	Q _{EE} ²⁾ (cooling season)	kWh/a ⁱⁱⁱ⁾	318	433	605
I	P _{designc}	kW	5,0	6,8	9,5
J	SCOP (Average)	-	3,8	3,8	3,8
K	Energy efficiency class SCOP (Average)	-	A	A	A
L	Q _{HE} ³⁾ heating season (Average)	kWh/a ⁱⁱⁱ⁾	811	1289	1842
M	P _{designh} (Average)	kW	2,2	3,5	5,0
N	Back up heating capacity (Average)	kW	0	0	0
O	Declared capacity(Average)	kW	2,2	3,5	5,0
P	Other heating seasons suitable for use	-	- ^{iv)}		
Q	SCOP (Warmer)	-	-	-	-
R	Energy efficiency class SCOP (Warmer)	-	-	-	-
S	Q _{HE} ³⁾ heating season (Warmer)	kWh/a ⁱⁱⁱ⁾	-	-	-
T	P _{designh} (Warmer)	kW	-	-	-
U	Back up heating capacity (Warmer)	kW	-	-	-
V	Declared capacity (Warmer)	kW	-	-	-
W	SCOP (Colder)	-	-	-	-
X	Energy efficiency class SCOP (Colder)	-	-	-	-
Y	Q _{HE} ³⁾ heating season (Colder)	kWh/a ⁱⁱⁱ⁾	-	-	-
Z	P _{designh} (Colder)	kW	-	-	-
AA	Back up heating capacity (Colder)	kW	-	-	-
AB	Declared capacity (Colder)	kW	-	-	-

1 Refrigerant leakage contributes to climate change. Refrigerant with lower global warming potential (GWP) would contribute less to global warming than a refrigerant with higher GWP, if leaked to the atmosphere. This appliance contains a refrigerant fluid with a GWP equal to [2088].

This means that if 1 kg of this refrigerant fluid would be leaked to the atmosphere, the impact on global warming would be [2088] times higher than 1 kg of CO₂, over a period of 100 years.

Never try to interfere with the refrigerant circuit yourself or disassemble the product yourself and always ask a professional.

- 2** Energy consumption “XYZ” kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.
- 3** Energy consumption “XYZ” kWh per year, based on standard test results. Actual energy consumption will depend on how the appliance is used and where it is located.

	[Spanish-ES]	[French-FR]	[Italian-IT]
i	REGLAMENTO DELEGADO (UE) No 626/2011 DE LA COMISIÓN	RÈGLEMENT DÉLÉGUÉ (UE) No 626/2011 DE LA COMMISSION	REGOLAMENTO DELEGATO (UE) N. 626/2011 DELLA COMMISSIONE
ii	Ficha del producto (etiquetado energético de los acondicionadores de aire)	Fiche produit (l'indication, par voie d'étiquetage, de la consommation d'énergie des climatiseurs)	Scheda prodotto (l'etichettatura indicante il consumo d'energia dei condizionatori d'aria)
iii	kWh/a	kWh/a	kWh/a
iv	-	-	-
A	Nombre del proveedor	Nom du fournisseur	Nome del Fornitore
B	Nombre del modelo(unidad interior/ exterior)	Nom du modèle(intérieur/extérieur)	Nome del Modello (Unità Interna/ Unità Esterna)
C	Nivel de potencia acústica (interior/ exterior)	Niveau de puissance acoustique (intérieur/extérieur)	Livello della potenza sonora (interno/ esterno)
D	Nombre del refrigerante ¹⁾	Nom du fluide frigorigène ¹⁾	Tipo di refrigerante ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Clase de eficiencia energética (SEER)	Classe d'efficacité énergétique (SEER)	Clesse di Efficienza Energetica (SEER)
H	Q _{CE} ²⁾ (temporada refrigeración)	Q _{CE} ²⁾ (saison froide)	Q _{CE} ²⁾ (stagione di raffreddamento)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (Media)	SCOP (moyenne)	SCOP (Átlagos)
K	Clase de eficiencia energética SCOP (Media)	Classe d'efficacité énergétique SCOP (moyenne)	Energy efficiency class SCOP (Átlagos)
L	Q _{HE} ³⁾ temporada calefacción (Media)	Q _{HE} ³⁾ saison chaude (moyenne)	Q _{HE} ³⁾ altre stagioni d'uso (Átlagos)
M	Pdesignh (Media)	Pdesignh (moyenne)	Pdesignh (Átlagos)
N	Copia de seguridad de capacidad de calefacción (Media)	Sauvegarder la capacité de chauffage (moyenne)	Eseguire il backup di potenza termica (Átlagos)
O	Potencia declarada (Media)	Puissance frigorifique déclarée (moyenne)	Névleges hűtéljesítmény (Átlagos)
P	Otras temporadas de calefacción declaradas aptas para funcionar	Adapté à d'autres saisons chaudes	Altre stagioni di utilizzo
Q	SCOP (Más cálida)	SCOP (plus chaude)	SCOP (Melegebb)
R	Clase de eficiencia energética SCOP (Más cálida)	Classe d'efficacité énergétique SCOP (plus chaude)	Energy efficiency class SCOP (Melegebb)
S	Q _{HE} ³⁾ temporada calefacción (Más cálida)	Q _{HE} ³⁾ saison chaude (plus chaude)	Q _{HE} ³⁾ altre stagioni d'uso (Melegebb)
T	Pdesignh (Más cálida)	Pdesignh (plus chaude)	Pdesignh (Melegebb)
U	Copia de seguridad de capacidad de calefacción (Más cálida)	Sauvegarder la capacité de chauffage (plus chaude)	Eseguire il backup di potenza termica (Melegebb)
V	Potencia declarada (Más cálida)	Puissance frigorifique déclarée (plus chaude)	Névleges hűtéljesítmény (Melegebb)
W	SCOP (Más fría)	SCOP (plus froide)	SCOP (Hidegebb)
X	Clase de eficiencia energética SCOP (Más fría)	Classe d'efficacité énergétique SCOP (plus froide)	Energy efficiency class SCOP (Hidegebb)
Y	Q _{HE} ³⁾ temporada calefacción (Más fría)	Q _{HE} ³⁾ saison chaude (plus froide)	Q _{HE} ³⁾ altre stagioni d'uso (Hidegebb)
Z	Pdesignh (Más fría)	Pdesignh (plus froide)	Pdesignh (Hidegebb)
AA	Copia de seguridad de capacidad de calefacción (Más fría)	Sauvegarder la capacité de chauffage (plus froide)	Eseguire il backup di potenza termica (Hidegebb)
AB	Potencia declarada (Más fría)	Puissance frigorifique déclarée (plus froide)	Névleges hűtéljesítmény (Hidegebb)

Appendix

	[Portuguese-PT]	[German-DE]	[Greek-EL]
i	REGULAMENTO DELEGADO (UE) N.º 626/2011 DA COMISSÃO	DELEGIERTE VERORDNUNG (EU) Nr. 626/2011 DER KOMMISSION	ΚΑΤ' ΕΞΟΥΣΙΟΔΟΤΗΣΗ ΚΑΝΟΝΙΣΜΟΣ (ΕΕ) αριθ. 626/2011 ΤΗΣ ΕΠΙΤΡΟΠΗΣ
ii	Ficha de produto (rotulagem energética dos aparelhos de ar condicionado)	Produktdatenblatt (die Kennzeichnung von Luftkonditionierern in Bezug auf den Energieverbrauch)	Δελτίο προϊόντος (επισήμανση της κατανάλωσης ενέργειας των κλιματιστικών)
iii	kWh/a	kWh/a	kWh/έτος
iv	-	-	-
A	Nome do fornecedor	Name des Lieferanten	Όνομα προμηθευτή
B	Nome do modelo (interior/exterior)	Modellbezeichnung(Innen-/Außengerät)	Ονομασία μοντέλου (εσωτερικού χώρου/εξωτερικού χώρου)
C	Nível de potência sonora (interior/exterior)	Schallleistungspegel (innen/außen)	Στάθμη ηχητικής ισχύος (εσωτερικού/εξωτερικού χώρου)
D	Nome do fluido refrigerante ¹⁾	Name des Kältemittels ¹⁾	Όνομα ψυκτικού μέσου ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Classe de eficiência energética (SEER)	Energieeffizienzklasse (SEER)	Τάξη ενεργειακής απόδοσης (SEER)
H	Q _{CE} ²⁾ (estação de arrefecimento)	Q _{CE} ²⁾ (Kühlperiode)	Q _{CE} ²⁾ (εποχή ψύξης)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (Μέδια)	SCOP (mittel)	SCOP (μέση εποχή)
K	Classe de eficiência energética SCOP (Μέδια)	Energieeffizienzklasse SCOP (mittel)	Τάξη ενεργειακής απόδοσης SCOP (μέση εποχή)
L	Q _{HE} ³⁾ estação de aquecimento (Μέδια)	Q _{HE} ³⁾ Heizperiode (mittel)	Q _{HE} ³⁾ εποχή θέρμανσης (μέση εποχή)
M	Pdesignh (Μέδια)	Pdesignh (mittel)	Pdesignh (μέση εποχή)
N	Fazer backup de capacidade de aquecimento (Μέδια)	Sichern Heizleistung (mittel)	Δημιουργία αντιγράφων ασφαλείας ικανότητα θέρμανσης (μέση εποχή)
O	Capacidade declarada (Μέδια)	Angegebene Leistung (mittel)	Δηλωμένη ψυκτική ισχύς (μέση εποχή)
P	Outras estações de aquecimento adequadas para utilização	Weitere geeignete Heizperioden	Άλλες εποχές θέρμανσης που είναι κατάλληλο για χρήση
Q	SCOP (Mais quente)	SCOP (wärmer)	SCOP (μέση εποχή)
R	Classe de eficiência energética SCOP (Mais quente)	Energieeffizienzklasse SCOP (wärmer)	Τάξη ενεργειακής απόδοσης SCOP (μέση εποχή)
S	Q _{HE} ³⁾ estação de aquecimento (Mais quente)	Q _{HE} ³⁾ Heizperiode (wärmer)	Q _{HE} ³⁾ εποχή θέρμανσης (μέση εποχή)
T	Pdesignh (Mais quente)	Pdesignh (wärmer)	Pdesignh (θερμότερη εποχή)
U	Fazer backup de capacidade de aquecimento (Mais quente)	Sichern Heizleistung (wärmer)	Δημιουργία αντιγράφων ασφαλείας ικανότητα θέρμανσης (θερμότερη εποχή)
V	Capacidade declarada (Mais quente)	Angegebene Leistung (wärmer)	Δηλωμένη ψυκτική ισχύς (θερμότερη εποχή)
W	SCOP (Mais fria)	SCOP (kälter)	SCOP (μέση εποχή)
X	Classe de eficiência energética SCOP (Mais fria)	Energieeffizienzklasse SCOP (mittel)	Τάξη ενεργειακής απόδοσης SCOP (μέση εποχή)
Y	Q _{HE} ³⁾ estação de aquecimento (Mais fria)	Q _{HE} ³⁾ Heizperiode (mittel)	Q _{HE} ³⁾ εποχή θέρμανσης (μέση εποχή)
Z	Pdesignh (Mais fria)	Pdesignh (kälter)	Pdesignh (ψυχρότερη εποχή)
AA	Fazer backup de capacidade de aquecimento (Mais fria)	Sichern Heizleistung (kälter)	Δημιουργία αντιγράφων ασφαλείας ικανότητα θέρμανσης (ψυχρότερη εποχή)
AB	Capacidade declarada (Mais fria)	Angegebene Leistung (kälter)	Δηλωμένη ψυκτική ισχύς (ψυχρότερη εποχή)

	[Dutch-NL]	[Polish-PL]	[Hungarian-HU]
i	COMMISSIE GEDELEGEERDE VERORDENING (EU) Nr. 626/2011	ROZPORZĄDZENIE DELEGOWANE KOMISJI (UE) NR 626/2011	626/2011 BIZOTTSÁGI FELHATALMAZÁSON ALAPULÓ RENDELET (EU)
ii	PRODUCTKAART (ENERGIELABEL VOOR AIRCONDITIONERS)	KARTA PRODUKTU (OZNACZENIE KLIMATYZATORÓW ODNOSZĄCE SIĘ DO ICH ZUŻYCIA ENERGII)	TERMÉK ADATLAP (LÉGKONDITIONÁLÓK ENERGIAHATÉKONYSÁGI CÍMKÉZÉSE)
iii	kWh/a	kWh/a	kWh/a
iv	-	-	-
A	Naam van de leverancier	Nazwa dostawcy	Forgalmazó neve
B	Modelnaam (binnen/buiten)	Nazwa modelu (Wewnętrzny/zewnętrzny)	Modellnév (Beltéri/kültéri)
C	Geluidsniveau (binnen/buiten)	Poziom mocy akustycznej (Wewnętrzna/zewnętrzna)	Zajsint (Beltéri/kültéri)
D	Koelmiddel ¹⁾	Nazwa środka chłodzącego ¹⁾	Hűtőközeg neve ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Energie-efficiëncyklasse (SEER)	Klasa energetyczna (SEER)	Energiahatékonysági osztály (SEER)
H	Q _{CE} ²⁾ (koelingsseizoen)	Q _{CE} ²⁾ (okres chłodzenia)	Q _{CE} ²⁾ (hűtési szezon)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (gemiddeld)	SCOP (średnie)	SCOP (átlagos)
K	Energie-efficiëncyklasse SCOP (gemiddeld)	Klasa energetyczna SCOP (średnie)	Energiahatékonysági osztály SCOP (átlagos)
L	Q _{HE} ³⁾ verwarmingsseizoen (gemiddeld)	Q _{HE} ³⁾ okres grzewczy (średnie)	Q _{HE} ³⁾ fűtési szezon (átlagos)
M	Pdesignh (gemiddeld)	Deklarowane obciążenie grzewcze (średnie)	Pdesignh (átlagos)
N	Verwarmingsovercapaciteit (gemiddeld)	Wydajność rezerwowego podgrzewacza elektrycznego (średnia)	Biztonsági fűtőtéljesítmény (átlagos)
O	Opgegeven capaciteit (gemiddeld)	Deklarowana wydajność (średnia)	Névleges teljesítmény (átlagos)
P	Andere verwarmingsseizoenen geschikt voor gebruik	Inne okresy grzania odpowiednie do użytku	Egyéb fűtési szezonban használható
Q	SCOP (warmer)	SCOP (cieplej)	SCOP (melegebb)
R	Energie-efficiëncyklasse SCOP (warmer)	Klasa energetyczna SCOP (cieplej)	Energiahatékonysági osztály SCOP (melegebb)
S	Q _{HE} ³⁾ verwarmingsseizoen (warmer)	Q _{HE} ³⁾ okres grzewczy (cieplej)	Q _{HE} ³⁾ fűtési szezon (melegebb)
T	Pdesignh (warmer)	Deklarowane obciążenie grzewcze (cieplej)	Pdesignh (melegebb)
U	Verwarmingsovercapaciteit (warmer)	Wydajność rezerwowego podgrzewacza (cieplej)	Biztonsági fűtőtéljesítmény (melegebb)
V	Opgegeven capaciteit (warmer)	Deklarowana wydajność (cieplej)	Névleges teljesítmény (melegebb)
W	SCOP (kouder)	SCOP (zimniej)	SCOP (hidegebb)
X	Energie-efficiëncyklasse SCOP (kouder)	Klasa energetyczna SCOP (zimniej)	Energiahatékonysági osztály SCOP (hidegebb)
Y	Q _{HE} ³⁾ verwarmingsseizoen (kouder)	Q _{HE} ³⁾ okres grzewczy (zimniej)	Q _{HE} ³⁾ fűtési szezon (hidegebb)
Z	Pdesignh (kouder)	Deklarowane obciążenie grzewcze (zimniej)	Pdesignh (hidegebb)
AA	Verwarmingsovercapaciteit (kouder)	Wydajność rezerwowego podgrzewacza (zimniej)	Biztonsági fűtőtéljesítmény (hidegebb)
AB	Opgegeven capaciteit (kouder)	Deklarowana wydajność (zimniej)	Névleges teljesítmény (hidegebb)

Appendix

	[Czech-CS]	[Slovak-SK]	[Romanian-RO]
i	NAŘÍZENÍ KOMISE V PŘENESENÉ PRAVOMOCI (EU) Č. 626/2011	DELEGOVANÉ NARIADENIE KOMISIE (EÚ) č. 626/2011	REGULAMENTUL DELEGAT (UE) 626/2011 AL COMISIEI
ii	LIST VÝROBKU (ENERGETICKÉ ŠTÍTKY KLIMATIZACÍ)	Opis výrobku (označovanie klimatizátorov energetickými)	FIȘA PRODUSULUI (ETICHETAREA ENERGETICĂ A APARATELOR DE AER CONDIȚIONAT)
iii	kWh/a	kWh/rok	kWh/a
iv	-	-	-
A	Název dodavatele	Názov dodávateľa	Numele furnizorului
B	Název modelu (vnitřní/venkovní)	Názov modelu (vnútorné/vonkajšie)	Numele modelului (interior/exterior)
C	Hladina akustického výkonu (vnitřní/venkovní)	Hladina akustického výkonu (vnútorná/vonkajšia)	Nivel de putere acustică (interior/exterior)
D	Název chladiva ¹⁾	Chladivo ¹⁾	Numele agentului frigorific ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Třída energetické účinnosti (SEER)	Trieda energetickej účinnosti (SEER)	Clasă de eficiență energetică (SEER)
H	$Q_{CE}^{2)}$ (období chlazení)	$Q_{CE}^{2)}$ (sezóna chladenia)	$Q_{CE}^{2)}$ (perioadă de răcire)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (průměr)	SCOP (Priemerná)	SCOP (mediu)
K	Třída energetické účinnosti SCOP (průměrný)	Trieda energetickej účinnosti SCOP (Priemerná)	Clasă de eficiență energetică SCOP (mediu)
L	$Q_{HE}^{3)}$ období topení (průměrný)	$Q_{HE}^{3)}$ sezóna vykurovania (Priemerná)	$Q_{HE}^{3)}$ perioadă de încălzire (mediu)
M	Pdesignh (průměr)	Pdesignh (Priemerná)	Pdesignh (mediu)
N	Záložní topný výkon (průměrný)	Zálohovanie vykurovací výkon (Priemerná)	Capacitate de încălzire de rezervă (medie)
O	Udávaný výkon (průměrný)	Deklarovaný chladiaci výkon (Priemerná)	Capacitate declarată (medie)
P	Další topné sezony vhodné k použití	Iné sezóny vykurovania, v ktorých je vhodné použitie zariadenia	Alte perioade de încălzire adecvate pentru utilizare
Q	SCOP (teplejší)	SCOP (Teplejšia)	SCOP (mai cald)
R	Třída energetické účinnosti SCOP (teplejší)	Trieda energetickej účinnosti SCOP (Teplejšia)	Clasă de eficiență energetică SCOP (mai cald)
S	$Q_{HE}^{3)}$ období topení (teplejší)	$Q_{HE}^{3)}$ sezóna vykurovania (Teplejšia)	$Q_{HE}^{3)}$ perioadă de încălzire (mai cald)
T	Pdesignh (teplejší)	Pdesignh (Teplejšia)	Pdesignh (mai cald)
U	Záložní topný výkon (teplejší)	Zálohovanie vykurovací výkon (Teplejšia)	Capacitate de încălzire de rezervă (mai cald)
V	Udávaný výkon (teplejší)	Deklarovaný chladiaci výkon (Teplejšia)	Capacitate declarată (mai cald)
W	SCOP (chladnější)	SCOP (Chladnejšia)	SCOP (mai rece)
X	Třída energetické účinnosti SCOP (chladnější)	Trieda energetickej účinnosti SCOP (Chladnejšia)	Clasă de eficiență energetică SCOP (mai rece)
Y	$Q_{HE}^{3)}$ období topení (chladnější)	$Q_{HE}^{3)}$ sezóna vykurovania (Chladnejšia)	$Q_{HE}^{3)}$ perioadă de încălzire (mai rece)
Z	Pdesignh (chladnější)	Pdesignh (Chladnejšia)	Pdesignh (mai rece)
AA	Záložní topný výkon (chladnější)	Zálohovanie vykurovací výkon (Chladnejšia)	Capacitate de încălzire de rezervă (mai rece)
AB	Udávaný výkon (chladnější)	Deklarovaný chladiaci výkon (Chladnejšia)	Capacitate declarată (mai rece)

	[Bulgarian-BG]	[Croatian-HR]	[Slovenian-SL]
i	ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) № 626/2011 НА КОМИСИЯТА	DELEGIRANA UREDBA KOMISIJE (EU) br. 626/2011	DELEGOVANÉ NARIADENIE KOMISIE (EÚ) č. 626/2011
ii	ПРОДУКТОВ ФИШ (ЕНЕРГИЙНО ЕТИКЕТИРАНЕ НА КЛИМАТИЦИ)	Informacijski list proizvoda (označivanja energetske učinkovitosti)	Opis výrobku (označovanie klimatizátorov energetickým)
iii	kWh/a	kWh/a	kWh/rok
iv	-	-	-
A	Име на доставчик	Naziv dobavljača	Názov dodávateľa
B	Име на модел (вътрешно/външно тяло)	Naziv modela (unutarnji/spoljni)	Názov modelu(vnútrorné/vonkajšie)
C	Ниво на акустична мощност (вътрешно/външно тяло)	Razina zvučne snage (u zatvorenom/otvorenom)	Hladina akustického výkonu (vnútrorná/vonkajšia)
D	Име на хладилен агент ¹⁾	Naziv rashladnog sredstva ¹⁾	Chladiivo ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Клас на енергийна ефективност (SEER)	Razred energetske učinkovitosti (SEER)	Trieda energetickej účinnosti (SEER)
H	Q _{CE} ²⁾ (сезон на охлаждане)	Q _{CE} ²⁾ (sezona hladenja)	Q _{CE} ²⁾ (sezóna chladenia)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (среден)	SCOP (Prosječno)	SCOP (Priemerná)
K	Клас на енергийна ефективност SCOP (среден)	Razred energetske učinkovitosti SCOP (Prosječno)	Trieda energetickej účinnosti SCOP (Priemerná)
L	Q _{HE} ³⁾ сезон на отопление (среден)	Q _{HE} ³⁾ sezona grijanja (Prosječno)	Q _{HE} ³⁾ sezóna vykurovania (Priemerná)
M	Обявен отоплителен товар (среден)	Pdesignh (Prosječno)	Pdesignh (Priemerná)
N	Капацитет на помощно отопление (среден)	Back up kapacitet grijanja (Prosječno)	Zálohovanie vykurovací výkon (Priemerná)
O	Деклариран капацитет (среден)	Prijavljeni kapacitet (Prosječno)	Deklarovaný chladiaci výkon (Priemerná)
P	Други сезони на отопление, подходящи за използване	Druge sezone grijanja u kojima se može koristiti	Iné sezóny vykurovania, v ktorých je vhodné použitie zariadenia
Q	SCOP (по-топло)	SCOP (Toplije)	SCOP (Teplejšia)
R	Клас на енергийна ефективност SCOP (по-топло)	Razred energetske učinkovitosti SCOP (Toplije)	Trieda energetickej účinnosti SCOP (Teplejšia)
S	Q _{HE} ³⁾ сезон на отопление (по-топло)	Q _{HE} ³⁾ sezona grijanja (Toplije)	Q _{HE} ³⁾ sezóna vykurovania (Teplejšia)
T	Обявен отоплителен товар (по-топло)	Pdesignh (Toplije)	Pdesignh (Teplejšia)
U	Капацитет на помощно отопление (по-топло)	Back up kapacitet grijanja (Toplije)	Zálohovanie vykurovací výkon (Teplejšia)
V	Деклариран капацитет (по-топло)	Prijavljeni kapacitet (Toplije)	Deklarovaný chladiaci výkon (Teplejšia)
W	SCOP (по-студено)	SCOP (Hladnije)	SCOP (Chladnejšia)
X	Клас на енергийна ефективност SCOP (по-студено)	Razred energetske učinkovitosti SCOP (Hladnije)	Trieda energetickej účinnosti SCOP (Chladnejšia)
Y	Q _{HE} ³⁾ сезон на отопление (по-студено)	Q _{HE} ³⁾ sezona grijanja (Hladnije)	Q _{HE} ³⁾ sezóna vykurovania (Chladnejšia)
Z	Обявен отоплителен товар (по-студено)	Pdesignh (Hladnije)	Pdesignh (Chladnejšia)
AA	Капацитет на помощно отопление (по-студено)	Back up kapacitet grijanja (Hladnije)	Zálohovanie vykurovací výkon (Chladnejšia)
AB	Деклариран капацитет (по-студено)	Prijavljeni kapacitet (Hladnije)	Deklarovaný chladiaci výkon (Chladnejšia)

Appendix

	[Danish-DA]	[Swedish-SV]	[Finnish-FI]
i	KOMMISSIONENS DELEGEREDE FORORDNING (EU) nr. 626/2011	KOMMISSIONENS DELEGERADE FÖRORDNING (EU) nr 626/2011	DELEGOITU KOMISSIION ASETUS (EU) N:o 626/2011
ii	DATABLAD (ENERGIMÆRKNING AF KLIMAANLÆG)	INFORMATIONSBLAG OM PRODUKTEN (ENERGIMÄRKNING AV LUFTKONDITIONERINGSAPPARATER)	DELEGOITU KOMISSIION ASETUS (EU) N:o 626/2011
iii	kWh pr. år	kWh/år	kWh/a
iv	-	-	-
A	Leverandørens navn	Leverantörens namn	Tavarantoimittajan nimi
B	Modelnavn (indendørs/udendørs)	Modellnamn (inomhus/utomhus)	Mallin nimi (sisä/ulko)
C	Lydeffektiviteitsniveau (indenfor/udenfor)	Ljudnivå (inomhus/utomhus)	Äänitehotaso (sisä/ulko)
D	Navnet på køleelementet ¹⁾	Köldmedium ¹⁾	Kylmäaineen nimi ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Energieffektiviteitsklasse (SEER)	Energieffektiviteitsklass (SEER)	Energiätehoisuusluokka (SEER)
H	Q _{CE} ²⁾ (kølesæson)	Q _{CE} ²⁾ (kylningssäsong)	Q _{CE} ²⁾ (jäähdytyskausi)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (gennemsnitlig)	SCOP (genomsnitt)	SCOP (keskimääräinen)
K	Energieffektiviteitsklasse SCOP (gennemsnitlig)	Energieffektiviteitsklass SCOP (genomsnitt)	Energiätehoisuusluokka SCOP (keskimääräinen)
L	Q _{HE} ³⁾ varmesæson (gennemsnitlig)	Q _{HE} ³⁾ oppvärmningssäsong (genomsnitt)	Q _{HE} ³⁾ lämmityskausi (keskimääräinen)
M	Pdesignh (gennemsnitlig)	Pdesignh (genomsnitt)	Pdesignh (keskimääräinen)
N	Backup-varmekapacitet (gennemsnitlig)	Backup-varmekapacitet (genomsnitt)	Varalämmitysteho (keskimääräinen)
O	Deklareret kapacitet (gennemsnitlig)	Deklarerad kapacitet (genomsnitt)	Ilmoitettu teho (keskimääräinen)
P	Andre opvarmningssäsoner, der er beregnet til brug	Andra passande oppvärmningssäsonger	Muut käytettävät lämmityskaudet
Q	SCOP (varmere)	SCOP (varmare)	SCOP (lämmin)
R	Energieffektiviteitsklasse SCOP (varmere)	Energieffektiviteitsklass SCOP (varmare)	Energiätehoisuusluokka SCOP (lämmin)
S	Q _{HE} ³⁾ varmesæson (varmere)	Q _{HE} ³⁾ oppvärmningssäsong (varmare)	Q _{HE} ³⁾ lämmityskausi (lämmin)
T	Pdesignh (varmere)	Pdesignh (varmare)	Pdesignh (lämmin)
U	Backup-varmekapacitet (varmere)	Backup-varmekapacitet (varmare)	Varalämmitysteho (lämmin)
V	Deklareret kapacitet (varmere)	Deklarerad kapacitet (varmare)	Ilmoitettu teho (lämmin)
W	SCOP (koldere)	SCOP (kallare)	SCOP (kylmä)
X	Energieffektiviteitsklasse SCOP (koldere)	Energieffektiviteitsklass SCOP (kallare)	Energiätehoisuusluokka SCOP (kylmä)
Y	Q _{HE} ³⁾ varmesæson (koldere)	Q _{HE} ³⁾ oppvärmningssäsong (kallare)	Q _{HE} ³⁾ lämmityskausi (kylmä)
Z	Pdesignh (koldere)	Pdesignh (kallare)	Pdesignh (kylmä)
AA	Backup-varmekapacitet (koldere)	Backup-varmekapacitet (kallare)	Varalämmitysteho (kylmä)
AB	Deklareret kapacitet (koldere)	Deklarerad kapacitet (kallare)	Ilmoitettu teho (kylmä)

	[Estonian-ET]	[Latvian-LV]	[Lithuanian-LT]
i	KOMISJONI DELEGEERITUD MÄÄRUS (EL) nr 626/2011	KOMISIJAS DELEĢĒTĀ REGULA (ES) NR. 626/2011	KOMISIJOS DELEGUOTASIS REGLAMENTAS (ES) Nr. 626/2011
ii	TOOTEKAART (ÕHUKONDISIONEERIDE ENERGIAMÄRGISTUS)	DATU LAPA (GAISA KONDICIONĒTĀJU ENERĢOMARKĒJUMS)	GAMINIO MIKROKORTA (ORO KONDICIONIERIŲ ENERĢIJOS SUVARTOJIMO ŽENKLINIMAS)
iii	kWh/a	kWh/a	kWh/a
iv	-	-	-
A	Tarnija nimi	Piegādātāja nosaukums	Tiekējo pavadinimas
B	Mudeli nimi (sisetingimused/välistingimused)	Modeļa nosaukums (iekštelpu/ārtelpu)	Modelio pavadinimas (naudojamo patalpose / lauke)
C	Helivõimsuse tase (sisetingimused/välistingimused)	Skaņas intensitātes līmenis (iekštelpu/ārtelpu)	Garso galios lygis (patalpose / lauke)
D	Jahutusaine nimi ¹⁾	Aukstumagenta nosaukums ¹⁾	Šaldalo pavadinimas ¹⁾
E	GWP	GWP	GWP
F	SEER	SEER	SEER
G	Energiatõhususe klass (SEER)	Energoefektivitātes klase (SEER)	Enerģijos suvartojimo efektyvumo klasė (SEER)
H	Q _{CE} ²⁾ (jahutamishooaeg)	Q _{CE} ²⁾ (dzesēšanas sezonā)	Q _{CE} ²⁾ (vēsinimo sezonas)
I	Pdesignc	Pdesignc	Pdesignc
J	SCOP (keskmīne)	SCOP (vidējā)	SCOP (vidutinis klimatas)
K	Energiatõhususe klass SCOP (keskmīne)	Energoefektivitātes klase SCOP (vidējā)	Enerģijos suvartojimo efektyvumo klasė SCOP (vidutinis klimatas)
L	Q _{HE} ³⁾ kütishooaeg (keskmīne)	Q _{HE} ³⁾ sildīšanas sezonā (vidējā)	Q _{HE} ³⁾ šildymo sezonas (vidutinis klimatas)
M	Pdesignh (keskmīne)	Deklarētā sildīšanas slodze (vidējā)	Projektinė apkrova šildymo režīmu (Pdesignh) (vidutinis klimatas)
N	Varukütte võimsus (keskmīne)	Rezerves sildīšanas jauda (vidējā)	Atsarginis šildymo pajėgumas (vidutinis klimatas)
O	Mārgitud võimsus (keskmīne)	Deklarētā jauda (vidējā)	Projektinis pajėgumas (vidutinis klimatas)
P	Muud sobivad kütishooajad	Citas sildīšanas sezonas, kas piemērotas lietošanai	Kiti šildymo sezonai, kurias tinkama naudoti
Q	SCOP (soojem)	SCOP (siltākā)	SCOP (šiltesnis klimatas)
R	Energiatõhususe klass SCOP (soojem)	Energoefektivitātes klase SCOP (siltākā)	Enerģijos suvartojimo efektyvumo klasė SCOP (šiltesnis klimatas)
S	Q _{HE} ³⁾ kütishooaeg (soojem)	Q _{HE} ³⁾ sildīšanas sezonā (siltākā)	Q _{HE} ³⁾ šildymo sezonas (šiltesnis klimatas)
T	Pdesignh (soojem)	Deklarētā sildīšanas slodze (siltākā)	Projektinė apkrova šildymo režīmu (Pdesignh) (šiltesnis klimatas)
U	Varukütte võimsus (soojem)	Rezerves sildīšanas jauda (siltākā)	Atsarginis šildymo pajėgumas (šiltesnis klimatas)
V	Mārgitud võimsus (soojem)	Deklarētā jauda (siltākā)	Projektinis pajėgumas (šiltesnis klimatas)
W	SCOP (kūlmem)	SCOP (aukstākā)	SCOP (šaltesnis klimatas)
X	Energiatõhususe klass SCOP (kūlmem)	Energoefektivitātes klase SCOP (aukstākā)	Enerģijos suvartojimo efektyvumo klasė SCOP (šaltesnis klimatas)
Y	Q _{HE} ³⁾ kütishooaeg (kūlmem)	Q _{HE} ³⁾ sildīšanas sezonā (aukstākā)	Q _{HE} ³⁾ šildymo sezonas (šaltesnis klimatas)
Z	Pdesignh (kūlmem)	Deklarētā sildīšanas slodze (aukstākā)	Projektinė apkrova šildymo režīmu (Pdesignh) (šaltesnis klimatas)
AA	Varukütte võimsus (kūlmem)	Rezerves sildīšanas jauda (aukstākā)	Atsarginis šildymo pajėgumas (šaltesnis klimatas)
AB	Mārgitud võimsus (kūlmem)	Deklarētā jauda (aukstākā)	Projektinis pajėgumas (šaltesnis klimatas)

Appendix

	[Serbian-SR]
i	КОМИСИЈА ДЕЛЕГАТЕД УРЕДБА (ЕС) № 626/2011
ii	ПРОИЗВОДА ФИЦХЕ (енергетског означавања клима уређаја)
iii	kWh/godišnje
iv	-
A	Naziv dobavljača
B	Naziv modela (unutrašnja jedinica/spoljašnja jedinica)
C	Nivo buke (unutrašnja/spoljna jedinica)
D	Naziv rashladnog sredstva ¹⁾
E	GWP
F	SEER
G	Klasa energetske efikasnosti (SEER)
H	Q _{CE} ²⁾ (sezona hlađenja)
I	Pdesignc
J	SCOP (Prosečno)
K	Klasa energetske efikasnosti SCOP (Prosečno)
L	Q _{HE} ³⁾ grejna sezona (Prosečno)
M	Pdesignh (Prosečno)
N	Бацк уп капацитет грејања (Prosečno)
O	Deklarisani kapacitet (Prosečno)
P	Druge grejne sezone погодне за коришћење
Q	SCOP (Топлији део године)
R	Klasa energetske efikasnosti SCOP (Топлији део године)
S	Q _{HE} ³⁾ grejna sezona (Топлији део године)
T	Pdesignh (Топлији део године)
U	Бацк уп капацитет грејања (Топлији део године)
V	Deklarisani kapacitet (Топлији део године)
W	SCOP (Хладнији део године)
X	Klasa energetske efikasnosti SCOP (Хладнији део године)
Y	Q _{HE} ³⁾ grejna sezona (Хладнији део године)
Z	Pdesignh (Хладнији део године)
AA	Бацк уп капацитет грејања (Хладнији део године)
AB	Deklarisani kapacitet (Хладнији део године)

[Spanish-ES]

- 1 Las fugas de refrigerante contribuyen al cambio climático. Cuanto mayor sea el potencial de calentamiento global (GWP) de un refrigerante, más contribuirá a dicho calentamiento su vertido a la atmósfera. Este aparato contiene un líquido refrigerante con un GWP igual a [2088]. Esto significa que, si pasara a la atmósfera 1 kg de este líquido refrigerante, el impacto en el calentamiento global sería, a lo largo de un periodo de 100 años, [2088] veces mayor que si se vertiera 1 kg de CO₂. Nunca intente intervenir en el circuito del refrigerante ni desmontar el aparato usted mismo; consulte siempre a un profesional.
- 2 Consumo de energía "XYZ" kWh/año, según los resultados obtenidos en ensayos estándar. El consumo de energía real depende de las condiciones de uso del aparato y del lugar en el que esté instalado.
- 3 Consumo de energía "XYZ" kWh/año, según los resultados obtenidos en ensayos estándar. El consumo de energía real depende de las condiciones de uso del aparato y del lugar en el que esté instalado.

[French-FR]

- 1 Les fuites de réfrigérants accentuent le changement climatique. En cas de fuite, l'impact sur le réchauffement de la planète sera d'autant plus limité que le potentiel de réchauffement planétaire (PRP) du réfrigérant est faible. Cet appareil utilise un réfrigérant dont le PRP est égal à [2088]. En d'autres termes, si 1 kg de ce réfrigérant est relâché dans l'atmosphère, son impact sur le réchauffement de la planète sera [2088] fois supérieur à celui d'1 kg de CO₂, sur une période de 100 ans. Ne tentez jamais d'intervenir dans le circuit frigorifique et de démonter les pièces vous-même et adressez-vous systématiquement à un professionnel.
- 2 Consommation d'énergie de "XYZ" kWh par an, déterminée sur la base des résultats obtenus dans des conditions d'essai normalisées. La consommation d'énergie réelle dépend des conditions d'utilisation et de l'emplacement de l'appareil.
- 3 Consommation d'énergie de "XYZ" kWh par an, déterminée sur la base des résultats obtenus dans des conditions d'essai normalisées. La consommation d'énergie réelle dépend des conditions d'utilisation et de l'emplacement de l'appareil.

[Italian-IT]

- 1 La perdita di refrigerante contribuisce al cambiamento climatico. In caso di rilascio nell'atmosfera, i refrigeranti con un potenziale di riscaldamento globale (GWP) più basso contribuiscono in misura minore al riscaldamento globale rispetto a quelli con un GWP più elevato. Questo apparecchio contiene un fluido refrigerante con un GWP di [2088]. Se 1 kg di questo fluido refrigerante fosse rilasciato nell'atmosfera, quindi, l'impatto sul riscaldamento globale sarebbe [2088] volte più elevato rispetto a 1 kg di CO₂, per un periodo di 100 anni. In nessun caso l'utente deve cercare di intervenire sul circuito refrigerante o di disassemblare il prodotto. In caso di necessità occorre sempre rivolgersi a personale qualificato.
- 2 Consumo di energia "XYZ" kWh/anno in base ai risultati di prove standard. Il consumo effettivo dipende dalle modalità di utilizzo dell'apparecchio e dal luogo in cui è installato.
- 3 Consumo di energia "XYZ" kWh/anno in base ai risultati di prove standard. Il consumo effettivo dipende dalle modalità di utilizzo dell'apparecchio e dal luogo in cui è installato.

Appendix

[Portuguese-PT]

- 1 A fuga de fluido refrigerante contribui para as alterações climáticas. Os fluidos refrigerantes com menor potencial de aquecimento global (PAG) contribuem menos para o aquecimento global do que os fluidos refrigerantes com maior PAG, em caso de fuga para a atmosfera. Este aparelho contém um fluido refrigerante com um PAG igual a [2088]. Isto significa que, se ocorrer uma fuga de 1 kg deste fluido refrigerante para a atmosfera, o seu impacto no aquecimento global será [2088] vezes mais elevado do que o de 1 kg de CO₂, durante um período de 100 anos. Nunca tome a iniciativa de intervir no circuito do fluido refrigerante ou de desmontar este produto; recorra sempre a um profissional.
- 2 Consumo de energia "XYZ" kWh por ano, com base nos resultados do teste normalizado. O valor real do consumo de energia dependerá do modo de utilização do aparelho e da sua localização.
- 3 Consumo de energia "XYZ" kWh por ano, com base nos resultados do teste normalizado. O valor real do consumo de energia dependerá do modo de utilização do aparelho e da sua localização.

[German-DE]

- 1 Der Austritt von Kältemittel trägt zum Klimawandel bei. Kältemittel mit geringerem Treibhauspotenzial tragen im Fall eines Austretens weniger zur Erderwärmung bei als solche mit höherem Treibhauspotenzial. Dieses Gerät enthält Kältemittel mit einem Treibhauspotenzial von [2088]. Somit hätte ein Austreten von 1 kg dieses Kältemittels [2088] Mal größere Auswirkungen auf die Erderwärmung als 1 kg CO₂, bezogen auf hundert Jahre. Keine Arbeiten am Kältekreislauf vornehmen oder das Gerät zerlegen – stets Fachpersonal hinzuziehen.
- 2 Energieverbrauch ‚XYZ‘ kWh/Jahr, auf der Grundlage von Ergebnissen der Normprüfung. Der tatsächliche Verbrauch hängt von der Nutzung und vom Standort des Geräts ab.
- 3 Energieverbrauch ‚XYZ‘ kWh/Jahr, auf der Grundlage von Ergebnissen der Normprüfung. Der tatsächliche Verbrauch hängt von der Nutzung und vom Standort des Geräts ab.

[Greek-EL]

- 1 Διαρροή ψυκτικού μέσου συμβάλλει στην κλιματική αλλαγή. Εάν διαρρεύσει στην ατμόσφαιρα ψυκτικό μέσο με χαμηλότερο δυναμικό θέρμανσης του πλανήτη (GWP) θα συμβάλει λιγότερο στην υπερθέρμανση του πλανήτη από ψυκτικό με υψηλότερο GWP. Αυτή η συσκευή περιέχει ψυκτικό μέσο με GWP ίσο με [2088]. Αυτό σημαίνει ότι εάν διαρρεύσει στην ατμόσφαιρα 1 kg του ψυκτικού μέσου, οι επιπτώσεις στην υπερθέρμανση του πλανήτη θα είναι [2088] φορές μεγαλύτερες από 1 kg CO₂, σε περίοδο 100 ετών. Ποτέ μην επιχειρήσετε να επεμβείτε στο κύκλωμα ψυκτικού μέσου ή να αποσυναρμολογήσετε το προϊόν και πάντοτε να απευθύνεστε σε επαγγελματία.
- 2 Κατανάλωση ενέργειας "XYZ" kWh ετησίως, με βάση τα αποτελέσματα πρότυπης δοκιμής. Η πραγματική κατανάλωση ενέργειας εξαρτάται από τον τρόπο χρήσης και τη θέση της συσκευής.
- 3 Κατανάλωση ενέργειας "XYZ" kWh ετησίως, με βάση τα αποτελέσματα πρότυπης δοκιμής. Η πραγματική κατανάλωση ενέργειας εξαρτάται από τον τρόπο χρήσης και τη θέση της συσκευής.

[Dutch-NL]

- 1 Lekkage van koelmiddel leidt tot klimaatverandering. Bij lekkage in de lucht draagt een koelmiddel met een laag aardopwarmingsvermogen (GWP) minder bij tot de opwarming van de aarde dan een koelmiddel met een hoog GWP. Dit apparaat bevat een koelmiddel met een GWP gelijk aan [2088]. Dit houdt in dat als 1 kg van deze koelvlloeistof in de lucht vrijkomt, het effect op de aardopwarming over een periode van 100 jaar [2088] keer groter zou zijn dan bij het vrijkomen van 1 kg CO₂. Laat het koelcircuit steeds ongemoeid en probeer nooit het product zelf te demonteren; vraag dit steeds aan een vakman.
- 2 Energieverbruik „XYZ“ kWh per jaar, gebaseerd op de resultaten van standaardtests. Het feitelijke energieverbruik is afhankelijk van de manier waarop het apparaat wordt gebruikt en de plaats waar het zich bevindt.
- 3 Energieverbruik „XYZ“ kWh per jaar, gebaseerd op de resultaten van standaardtests. Het feitelijke energieverbruik is afhankelijk van de manier waarop het apparaat wordt gebruikt en de plaats waar het zich bevindt.

[Polish-PL]

- 1 Wycieki czynników chłodniczych przyczyniają się do zmiany klimatu. W przypadku przedostania się do atmosfery czynnik chłodniczy o niższym współczynniku ocieplenia globalnego (GWP) ma mniejszy wpływ na globalne ocieplenie niż czynnik o wyższym współczynniku GWP. Urządzenie zawiera płyn chłodniczy o współczynniku GWP wynoszącym [2088]. Powyższe oznacza, iż w przypadku przedostania się 1 kg takiego płynu chłodniczego do atmosfery, jego wpływ na globalne ocieplenie byłby [2088] razy większy niż wpływ 1 kg CO₂ w okresie 100 lat. Nigdy nie należy samodzielnie manipulować przy obiegu czynnika chłodniczego lub demontować urządzenia, należy zawsze zwrócić się o pomoc specjalisty.
- 2 Zużycie energii elektrycznej »XYZ« kWh rocznie na podstawie wyników próby przeprowadzonej w normalnych warunkach. Rzeczywiste zużycie energii elektrycznej zależy od sposobu użytkowania urządzenia i miejsca, w którym się ono znajduje.
- 3 Zużycie energii elektrycznej »XYZ« kWh rocznie na podstawie wyników próby przeprowadzonej w normalnych warunkach. Rzeczywiste zużycie energii elektrycznej zależy od sposobu użytkowania urządzenia i miejsca, w którym się ono znajduje.

[Hungarian-HU]

- 1 A hűtőfolyadék szivárgása hozzájárul a globális felmelegedéshez. Minél kisebb egy hűtőfolyadék globális felmelegedési potenciálja (GWP-je), annál kevésbé járul hozzá a globális felmelegedéshez, ha a légkörbe kerül. A készülékben található hűtőfolyadék GWP-je [2088]. Ez azt jelenti, hogy ha ebből a hűtőfolyadékból 1 kilogramm a légkörbe kerülne, akkor a globális felmelegedésre 100 év alatt [2088]-szor/-szer/-ször akkora hatást gyakorolna, mint 1 kilogramm szén-dioxid. Ne próbáljon saját kezűleg beavatkozni a hűtőkörbe, és ne szedje szét saját kezűleg a terméket! Ezt a feladatot mindig bízza szakemberre!
- 2 »XYZ« kWh/év energiafogyasztás szabványos vizsgálati eredmények alapján. A tényleges energiafogyasztás függ a készülék elhelyezésétől és használatának módjától.
- 3 »XYZ« kWh/év energiafogyasztás szabványos vizsgálati eredmények alapján. A tényleges energiafogyasztás függ a készülék elhelyezésétől és használatának módjától.

[Czech-CS]

- 1 Únik chladiva se podílí na změně klimatu. Chladivo s nižším potenciálem globálního oteplování (GWP) by se v případě úniku do ovzduší podílelo na globálním oteplování méně než chladivo s vyšším GWP. Toto zařízení obsahuje chladicí kapalinu s GWP ve výši [2088]. To znamená, že pokud by do ovzduší unikl 1 kg této chladicí kapaliny, dopad na globální oteplování by byl v horizontu 100 let [2088] krát vyšší než 1 kg CO₂. Nenarušujte chladicí oběh ani sami výrobek nedemontujte, vždy se obraťte na odborníka.
- 2 Spotřeba energie ,XYZ' kWh za rok, založená na výsledcích normalizované zkoušky. Skutečná spotřeba energie závisí na způsobu použití a umístění spotřebiče.
- 3 Spotřeba energie ,XYZ' kWh za rok, založená na výsledcích normalizované zkoušky. Skutečná spotřeba energie závisí na způsobu použití a umístění spotřebiče.

[Slovak-SK]

- 1 Úniky chladiva prispievajú k zmene klímy. Chladivo s nižším potenciálom prispievania ku globálnemu otepleniu (GWP) by pri úniku do atmosféry prispelo ku globálnemu otepleniu v nižšej miere ako chladivo s vyšším GWP. Toto zariadenie obsahuje chladiacu kvapalinu s GWP rovnajúcim sa [2088]. Znamená to, že ak by do atmosféry unikol 1 kg tejto chladiacej kvapaliny, jej vplyv na globálne otepľovanie by bol [2088] krát vyšší ako vplyv 1 kg CO₂, a to počas obdobia 100 rokov. Nikdy sa nepokúšajte zasahovať do chladiaceho okruhu alebo demontovať výrobok a vždy sa obráťte na odborníka.
- 2 Spotreba energie XYZ kWh za rok na základe výsledkov štandardného preskúšania. Skutočná spotreba energie bude závisieť od toho, ako sa zariadenie používa a kde je umiestnené.
- 3 Spotreba energie XYZ kWh za rok na základe výsledkov štandardného preskúšania. Skutočná spotreba energie bude závisieť od toho, ako sa zariadenie používa a kde je umiestnené.

Appendix

[Romanian-RO]

- 1 Scurgerea de agent frigorific contribuie la schimbările climatice. Dacă s-ar scurge în atmosferă, agenții frigorifici cu un potențial de încălzire globală (GWP) mai redus ar contribui într-un mod mai puțin semnificativ la încălzirea globală decât un agent frigorific cu un GWP mai ridicat. Acest aparat conține un fluid refrigerant cu un GWP egal cu [2088]. Aceasta înseamnă că, dacă 1 kg din acest fluid refrigerant s-ar scurge în atmosferă, impactul asupra încălzirii globale ar fi de [2088] ori mai mare decât 1 kg de CO₂ pe o perioadă de 100 de ani. Nu încercați să interveniți în circuitul agentului frigorific sau să demontați singur produsul, apălați întotdeauna la un specialist.
- 2 Consum de energie de «XYZ» kWh pe an, pe baza rezultatelor testelor standard. Consumul real de energie va depinde de modul de utilizare a aparatului și de locul unde este amplasat.
- 3 Consum de energie de «XYZ» kWh pe an, pe baza rezultatelor testelor standard. Consumul de energie real depinde de condițiile de utilizare a aparatului și de locul unde este amplasat.

[Bulgarian-BG]

- 1 Изпускането на хладилен агент допринася за изменението на климата. Хладилен агент с по-нисък потенциал за глобално затопляне (ПГЗ) би допринесъл по-малко за глобалното затопляне, отколкото хладилен агент с по-висок ПГЗ при евентуално изпускане в атмосферата. Настоящият уред съдържа хладилен агент с ПГЗ в размер на [2088]. Това означава, че ако 1 kg от хладилния агент бъде изпуснат в атмосферата, въздействието за глобално затопляне ще бъде [2088] пъти повече, отколкото от 1 kg CO₂ за период от 100 години. Никога не се опитвайте да се намесвате в работата на кръга на хладилния агент или сами да разглобявате уреда, а винаги се обръщайте към специалист.
- 2 XYZ" в kWh годишно, въз основа на резултати от стандартно изпитване. Действителната консумация на енергия ще зависи от това как се използва уредът и къде се намира той.
- 3 XYZ" в kWh годишно, въз основа на резултати от стандартно изпитване. Действителната консумация на енергия ще зависи от това как се използва уредът и къде се намира той.

[Croatian-HR]

- 1 Istjecanje rashladnih sredstava doprinosi klimatskim promjenama. U slučaju ispuštanja u atmosferu rashladno sredstvo s nižim potencijalom globalnog zagrijavanja (GWP) manje bi utjecalo na globalno zagrijavanje od rashladnog sredstva s višim GWP-om. Taj uređaj sadrži rashladnu tekućinu s GWP-om jednakim [2088]. To znači da bi u slučaju istjecanja 1 kg te rashladne tekućine u atmosferu, njezin utjecaj na globalno zagrijavanje bio [2088] puta veći od utjecaja 1 kg CO₂ tijekom razdoblja od 100 godina. Nikada sami ne pokušavajte raditi bilo kakve zahvate na rashladnom krugu niti rastavljati proizvod i za to uvijek zovite profesionalca.
- 2 Potrošnja energije XYZ kWh na godinu, na temelju rezultata standardnih ispitivanja. Stvarna potrošnja energije ovisi o načinu uporabe uređaja i o mjestu na kojem se nalazi.
- 3 Potrošnja energije XYZ kWh na godinu, na temelju rezultata standardnih ispitivanja. Stvarna potrošnja energije ovisi o načinu uporabe uređaja i o mjestu na kojem se nalazi.

[Slovenian-SL]

- 1 Puščanje hladilnih sredstev prispeva k podnebnim spremembam. V primeru izpusta v ozračje bi hladilno sredstvo z nižjim potencialom globalnega segrevanja (GWP) k globalnemu segrevanju prispevalo manj kot hladilno sredstvo z višjim GWP. Ta naprava vsebuje hladilno tekočino z GWP, enakim [2088]. To pomeni, da bi bil v obdobju 100 let vpliv na globalno segrevanje v primeru izpusta v ozračje 1 kg zadevne hladilne tekočine [2088] večji od 1 kg CO₂. Nikoli ne poskušajte sami spremeniti hladilnega obtoka ali razstaviti naprave in za to vedno prosite strokovnjaka.
- 2 Letna poraba energije ‚XYZ‘ kWh na leto na podlagi rezultatov standardnega preskusa. Dejanska poraba energije je odvisna od načina uporabe naprave in njene lokacije.
- 3 Letna poraba energije ‚XYZ‘ kWh na leto na podlagi rezultatov standardnega preskusa. Dejanska poraba energije je odvisna od načina uporabe naprave in njene lokacije.

[Danish-DA]

- 1 Kølemiddeludslip medvirker til klimaforandringerne. Slipper kølemidlet ud i atmosfæren, bidrager det mindre til den globale opvarmning, hvis dets potentiale for global opvarmning (GWP) er lavt, end hvis det er højt. Dette apparat indeholder en kølevæske, hvis GWP-tal er [2088]. Det betyder, at lækkes 1 kg af dette kølemiddel til atmosfæren, så vil det gennem en periode på 100 år bidrage [2088] gange mere til den globale opvarmning end 1 kg CO₂. Prøv aldrig at pille ved kølemiddelkredsløbet eller at skille produktet ad selv - overlad altid det til en fagmand.
- 2 Elforbrug »XYZ« kWh pr. år på grundlag af standardiserede prøvningsresultater. Det faktiske energiforbrug vil afhænge af, hvordan apparatet anvendes, og hvor det er placeret.
- 3 »Elforbrug »XYZ« kWh pr. år, på grundlag af standardiserede prøvningsresultater. Det faktiske energiforbrug vil afhænge af, hvordan apparatet anvendes, og hvor det er placeret.

[Swedish-SV]

- 1 Läckage av köldmedium bidrar till klimatförändringen. Köldmedium med lägre global uppvärmningspotential (GWP) skulle vid läckare ge upphov till mindre global uppvärmning än ett köldmedium med högre GWP. Den här apparaten innehåller ett köldmedium med GWP motsvarande [2088]. Det betyder att om 1 kg av köldmediet skulle läcka ut i atmosfären, skulle påverkan på den globala uppvärmningen vara [2088] gånger högre än 1 kg CO₂ under en hundraårsperiod. Försök aldrig själv montera isär produkten eller mixtra med köldmediekretsloppet. Rådfråga alltid en fackutbildad person.
- 2 Energiförbrukning 'XYZ' i kWh per år, baserat på resultat från standardiserade provningar. Den faktiska energiförbrukningen beror på hur apparaten används och var den placeras.
- 3 Energiförbrukning 'XYZ' i kWh per år, baserat på resultat från standardiserade provningar. Den verkliga energiförbrukningen beror på hur apparaten används och var den placeras.

[Finnish-FI]

- 1 Kylmäainevuodot vaikuttavat ilmastonmuutokseen. Kylmäaineen, jolla on alhaisempi ilmakehän lämmitysvaikeuspotentialiaali (GWP), ilmastonmuutosvaikutus olisi pienempi kuin korkeamman GWP-arvon kylmäaineen, jos kylmäainetta pääsisi ilmakehään. Tämä laite sisältää kylmäainetta, jonka GWP-arvo on [2088]. Tämä tarkoittaa, että jos yksi kilo tätä kylmäainetta pääsisi ilmakehään, sen vaikutus ilmaston lämpenemiseen olisi [2088] kertaa suurempi kuin yhdellä kilolla hiilidioksidia 100 vuoden ajanjaksolla. Älä koskaan yritä kajota kylmäainepiiriin tai purkaa tuotetta omin päin, vaan pyydä aina ammattilaisen apua.
- 2 Energiankulutus 'XYZ' kWh vuodessa laskettuna vakio-olosuhteissa. Tosiasiallinen energiankulutus riippuu laitteen käyttötavoista ja laitteen sijoituksesta.
- 3 Energiankulutus 'XYZ' kWh vuodessa laskettuna vakio-olosuhteissa. Tosiasiallinen energiankulutus riippuu laitteen käyttötavoista ja laitteen sijoituksesta.

[Estonian-ET]

- 1 Külmutusaine leke hoogustab kliima soojenemist. Atmosfääri sattumisel annab madalama ülemaailmsed soojenemist põhjustava mõju (GWP) väärtusega külmutusaine väiksema panuse ülemaailmsesse kliimasoojenemisse kui kõrgema GWP väärtusega külmutusaine. Seade sisaldab külmutusvedelikku, mille GWP väärtus on [2088]. See tähendab, et kui 1 kg seda külmutusvedelikku satub atmosfääri, annab see 100 aasta jooksul [2088] korda suurema panuse ülemaailmsesse kliimasoojenemisse kui 1 kg CO₂. Ärge kunagi püüdke ise muuta külmutusaine voolusüsteemi, samuti ärge püüdke seadet ise koost lahti võtta, vaid pöörduge alati spetsialisti poole.
- 2 Energiatarbimine XYZ kilovatt-tundi aastas, põhineb standardtingimustes mõõdetud tulemustel. Tegelik energiatarbimine oleneb seadme kasutusviisist ja asukohast.
- 3 Energiatarbimine XYZ kilovatt-tundi aastas, põhineb standardtingimustes mõõdetud tulemustel. Tegelik energiatarbimine oleneb seadme kasutusviisist ja asukohast.

Appendix

[Latvian-LV]

- 1 Aukstumaģentu noplūdes veicina klimata pārmaiņas. Aukstumaģenta noplūdes gadījumā ierīces ar zemāku aukstumaģenta globālās sasilšanas potenciālu (GSP) nodara mazāku kaitējumu videi. Šajā ierīcē atrodas dzesēšanas šķidrums, kura globālās sasilšanas potenciāls GSP ir [2088]. Tas nozīmē, ka, ja vidē nokļūst 1 kg šā dzesēšanas šķidrums, ietekme uz globālo sasilšanu 100 gadu laikā ir [2088] reizes lielāka nekā 1 kg CO₂. Nekādā gadījumā neiejaucieties dzesēšanas ķēdes darbībā un nemēģiniet izjaukt ierīci. Vienmēr uzticiet to kvalificētam speciālistam.
- 2 Elektroenerģijas patēriņš "XYZ" kWh gadā, pamatojoties uz standarta testu rezultātiem. Faktiskais elektroenerģijas patēriņš atkarīgs no ierīces izmantošanas veida un atrašanās vietas.
- 3 Elektroenerģijas patēriņš "XYZ" kWh gadā, pamatojoties uz standarta testu rezultātiem. Faktiskais elektroenerģijas patēriņš atkarīgs no ierīces izmantošanas veida un atrašanās vietas.

[Lithuanian-LT]

- 1 Šaldalo nuotėkis prisideda prie klimato kaitos. Jei šaldalo nutekėtų į atmosferą, mažesnį visuotinio atšilimo potencialą turintis šaldalas mažiau prisidėtų prie visuotinio atšilimo negu didesnį visuotinio atšilimo potencialą turintis šaldalas. Šiame prietaise yra skysto šaldalo, kurio visuotinio atšilimo potencialas yra [2088]. Tai reiškia, kad jei 1 kg šio šaldalo nutekėtų į atmosferą, poveikis visuotiniam atšilimui būtų [] kartų didesnis negu 1 kg CO₂ nuotėkio per 100 metų. Niekada nebandykite patys taisyti šaldalo kontūrą ar išrinkti prietaiso. Visuomet kreipkitės į profesionalus.
- 2 Suvartojamos energijos kiekis – „XYZ“ kWh per metus, grindžiamas įprasto bandymo rezultatais. Faktinis suvartojamos energijos kiekis priklauso nuo to, kaip prietaisas naudojamas ir kur jis pastatytas.
- 3 Suvartojamos energijos kiekis – „XYZ“ kWh per metus, grindžiamas įprasto bandymo rezultatais. Faktinis suvartojamos energijos kiekis priklauso nuo to, kaip prietaisas naudojamas ir kur jis pastatytas.

[Serbian-SR]

- 1 Curenje rashladnog sredstva doprinosi klimatskim promenama. Ako iscuri u atmosferu, rashladno sredstvo s nižim potencijalom globalnog zagrevanja (GWP) manje će doprineti globalnom zagrevanju nego rashladno sredstvo sa višim potencijalom globalnog zagrevanja. Ovaj uređaj sadrži rashladnu tečnost sa vrednošću GWP od [2088]. To znači da, ako 1 kg ove rashladne tečnosti iscuri u atmosferu, uticaj na globalno zagrevanje će biti [2088] puta veći nego da iscuri 1 kg CO₂, posmatrano u periodu od 100 godina. Ne pokušavajte sami da zamenite rashladno sredstvo niti da rasklopite proizvod, već uvek zatražite pomoć stručnjaka.
- 2 Potrošnja energije „XYZ“ kWh godišnje, na osnovu rezultata standardnog testa. Stvarna potrošnja energije zavisi od toga kako se uređaj koristi i gde je smešten.
- 3 Potrošnja energije „XYZ“ kWh godišnje, na osnovu rezultata standardnog testa. Stvarna potrošnja energije zavisi od toga kako se uređaj koristi i gde je smešten."

Troubleshooting

The table below list the self-diagnostic routines. For some of error codes, you must contact an authorized service centre.

If an error occurs during the operation, it is displayed on the outdoor unit PCB LED, both MAIN PCB and INVERTER PCB.

No.	Error Code	Meaning	Remarks
1	E108	Error due to duplicated communication address	Check on repeated indoor unit main address
2	E121	Error on room temperature sensor of indoor unit (Short or Open)	Indoor unit Room Thermistor Open/Short
3	E122	Error on EVA IN sensor of indoor unit (Short or Open)	Indoor unit EVA_IN Thermistor Open/Short
4	E123	Error on EVA OUT sensor of indoor unit (Short or Open)	Indoor unit EVA_OUT Thermistor Open/Short
5	E153	Error on float switch (2nd detection)	Indoor unit Float Switch Open/Short Drain Pump operation Check
6	E154	Indoor fan error	Check on indoor unit indoor Fan operation
7	E198	Error on thermal fuse of indoor unit (Open)	Thermal Fuse Open Check of indoor unit Terminal Block
8	E201	Communication error between the indoor unit and outdoor unit (Pre-tracking failure or when the actual number of indoor units are different from the indoor unit quantity setting on the outdoor unit) Error due to communication tracking failure after initial power is supplied (The error occurs regardless of the number of units.)	Check indoor quantity setting in outdoor
9	E202	Communication error between indoor unit and outdoor unit (When there is no response from indoor units after tracking is completed)	Check electrical connection and setting between indoor unit and outdoor unit
10	E203	Communication error between the outdoor unit and main micom (For PF #4 to #6 controllers, error will be determined from the time when the compressor is turned on.)	Check electrical connection and setting between indoor unit MAIN PBA - INVERTER PBA
11	E221	Error on outdoor temperature sensor (Short or Open)	Check Outdoor sensor Open / Short
12	E231	Error on outdoor COND OUT sensor (Short or Open)	Check Cond-Out sensor Open / Short
13	E251	Error on discharge temperature sensor of compressor 1 (Short or Open)	Check Discharge sensor Open / Short
14	E320	Error on OLP sensor (Short or Open)	Check OLP sensor Open / Short
15	E403	Compressor down due to freeze protection control	Check Outdoor Cond.
16	E404	System stop due to overload protection control	Check Comp. when it starts
17	E416	System stop due to discharge temperature	-

Appendix

No.	Error Code	Meaning	Remarks
18	E422	Blockage detected on high pressure pipe	1. Check if the service valve is open 2. Check for refrigerant leakage (pipe connections, heat exchanger) and charge refrigerant if necessary 3. Check if there's any blockage on the refrigerant cycle (indoor unit/outdoor unit) 4. Check if additional refrigerant has been added after pipe extension
19	E440	Heating operation restricted at outdoor temperature over Theat_high value	HEATING
20	E441	Cooling operation restricted at outdoor temperature below Tcool_low value	COOLING
21	E458	Fan speed error	FAN1 ERROR
22	E461	Error due to operation failure of inverter compressor	-
23	E462	System stop due to full current control	-
24	E463	Over current trip / PFC over current error	Check OLP sensor
25	E464	IPM Over Current(O.C)	IPM
26	E465	Comp. Over load error	-
27	E466	DC-Link voltage under/over error	Check AC Power and DC Link Voltage
28	E467	Error due to abnormal rotation of the compressor or unconnected wire of compressor	Check Comp wire
29	E468	Error on current sensor (Short or Open)	Check Outdoor Inverter PBA.
30	E469	Error on DC-Link voltage sensor (Short or Open)	-
31	E470	Outdoor unit EEPROM Read/Write error (Option)	Check Outdoor EEPROM Data
32	E471	Outdoor unit EEPROM Read/Write error (H/W)	Check Outdoor EEPROM PBA
33	E474	Error on IPM Heat Sink sensor of inverter 1 (Short or Open)	Check Outdoor Inverter PBA.
34	E483	Over Voltage Protecting Error	Check Outdoor inverter PBA
35	E484	PFC Overload (Over current) Error	Check Outdoor Inverter PBA.
36	E485	Error on input current sensor of inverter 1 (Short or Open)	Check Outdoor EEPROM PBA
37	E488	AC Input Voltage limit Sensor Error	Check Outdoor inverter PBA
38	E500	IPM over heat error on inverter 1	Check Outdoor Inverter PBA.
39	E508	Smart install is not installed	-
40	E554	Gas leak detected	Check the refrigerant
41	E556	Error due to mismatching capacity of indoor and outdoor unit	Check the indoor and outdoor unit capacity
42	E557	When DPM mode, Product option are not same between indoor units	-
43	E590	Inverter EEPROM Checksum error	-

Technical specifications

Model	Net weight (kg)	Net dimension (W × D × H) (mm)
AC026MXADKH/EU	32.8	790 × 285 × 548
AC035MXADKH/EU	32.8	790 × 285 × 548
AC052MXADKH/EU	43.8	880 × 310 × 638
AC060MXADKH/EU	43.8	880 × 310 × 638
AC071MXADKH/EU	53.0	880 × 310 × 798
AC052MXASEH/EU	37.5	790 × 285 × 548
AC071MXASEH/EU	53.0	880 × 310 × 798
AC100MXASEH/EU	69.2	880 × 320 × 967

